

## **Shop Accessories!**

for all your Panasonic gear

Go to

[http://shop.panasonic.com/  
support](http://shop.panasonic.com/support)

Get everything you need to get the most out of your Panasonic products Accessories & Parts for your Camera, Phone, A/V products, TV, Computers & Networking, Personal Care, Home Appliances, Headphones, Batteries, Backup Chargers & more...

## **Customer Services Directory**

For Product Information, Operating Assistance, Parts, Owner's Manuals, Dealer and Service info go to [http://shop.panasonic.com/  
support](http://shop.panasonic.com/support)

For the hearing or speech impaired TTY: 1-877-833-8855

Panasonic Consumer Electronics Company,  
Division of Panasonic Corporation of North America  
Two Riverfront Plaza  
Newark, New Jersey 07102  
Website : <http://shop.panasonic.com/support>

# Panasonic®

**Owner's Manual**  
**Home Chef Magic Pot™**  
**Household Use Only**  
**Model No. NN-ASP1AW**



Scan this code for product registration



**PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT, AND SAVE THIS MANUAL FOR FUTURE USE.**

To register your product and for all other assistance, please contact us via the web at:  
<http://shop.panasonic.com/support> (U.S.A Only)

Para obtener instrucciones en español, por favor visite la página web en:  
<http://shop.panasonic.com/support>


© Panasonic Corporation 2024

F0003CD82AP  
FLE0821-20824  
Printed in China

## Contents

Parts Introduce.....	2	Important Safety Instructions.....	3
Specifications.....	2	Using the Magic Pot.....	4-5
		Applicable models.....	5

## Parts Introduce

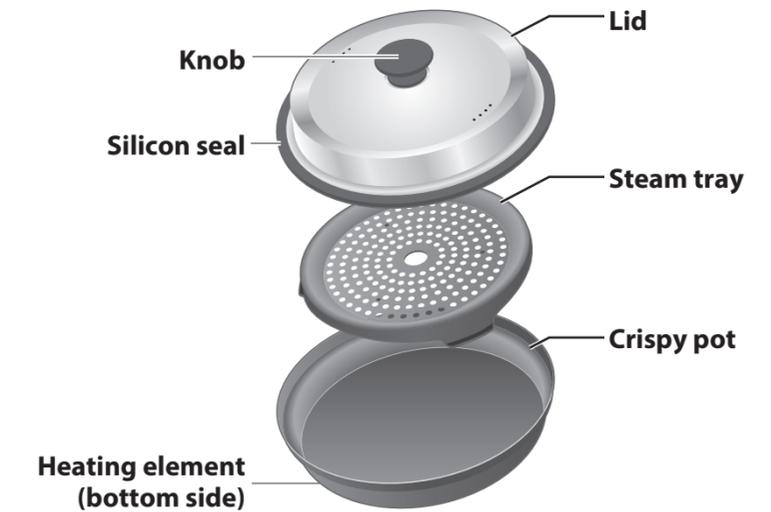

The illustration is for reference only.

## Specifications

Outside Dimension with lid (Φ x H).....	11 5/8" x 4 7/8"
	(295 mm x 124 mm)
Net Weight (set).....	Approx. 2.6 lbs (1.2 kg)

Specifications subject to change without notice.



## Important Safety Instructions

### Caution:

- The Magic Pot is specially designed for the ovens in the applicable model list on page 5. Using in other microwave ovens may cause sparking, melting or other problems.
- The lid will be hot after cooking. To prevent personal injury, use oven mitts when handling the lid or any part of the Magic Pot.
- To avoid personal injury, do not open the lid while your face is close to the Magic Pot.

### Notes:

- Always use the crispy pot on the glass tray. Do not use with the wire rack (only NN-CD8\*\*\*, NN-CV8\*\*\* and NN-GN6\*\*\*) in microwave mode or combination modes which microwave existed.
- For crisping grill mode, do not preheat the crispy pot for more than 3 minutes.
- Always place the crispy pot in the center of the glass tray and ensure it does not touch the wall of the oven cavity. Failure to do so, may cause sparking which would damage the cavity.
- Do not place any heat-sensitive materials on the hot crispy pot in combination grill and microwave. Only microwave mode (High power is recommended) can be used for preheating the crispy pot.
- The black silicon seal may be removed for cleaning. Always re-position before use to prevent sparking.

### User Instructions:

- Although the lid and crispy pot are metal, if placed in the center of the glass tray, they can be used safely. Putting in center is to keep the good cooking condition, including microwave power absorbing, and heater radiation. Do not use the Magic Pot in any other microwave ovens and do not use in conventional ovens.
- To use the Magic Pot, the crispy pot, steam tray and lid are used together (page 4 for proper usage).
- The steam tray is placed inside the crispy pot with the lid on top. Food is placed on the steam tray.
- Always add 5 fl.oz (or specified in recipes) tap water in the base of the crispy pot before using steam menu.
- The Magic Pot must only be used in microwave mode. When using the crispy pot alone as crispy grill, it can be used in grill or combination modes (only NN-CD8\*\*\*, NN-CV8\*\*\* and NN-GN6\*\*\*).
- The crispy pot and lid can be used together (without the steam tray) for pan sear or simmer functions (see page 4 for proper usage).
- To avoid melting under high temperature, do not use the steam tray or lid in grill or combination modes (only NN-CD8\*\*\*, NN-CV8\*\*\* and NN-GN6\*\*\*)
- Ensure all food packaging is remove before cooking.

### Care of the Magic Pot:

- Never cut pizza, quiche or any other foods directly in the crispy pot as this will damage the non-stick surface.
- After use, wash the Magic Pot in hot soapy water and rinse in hot water. Do not use any abrasive clearing substances or scouring pads as this will damage the surface of the crispy pot.

## Using the Magic Pot

Function	Accessory to Use	Concept	Instructions
<b>Pan Sear</b>		The crispy pot is used together with the lid. Suitable foods such as, fish fillets, chicken pieces, burgers are placed directly on the crispy pot. The food is cooked from the heat of the base of the pan. The bottom side of the food will be brown and crisp.	Place the food directly on the crispy pot, cover with the lid and place on the glass tray. If required, turn or rearrange the food during cooking. Please refer to cooking chart on recipe book. *For some recipes, preheating the crispy pot before cooking can get more crispy result. Follow the instructions on recipe book.
<b>Simmer</b>		The crispy pot is used together with the lid. It is suitable for simmering risotto, seafood pot, meat or vegetable stews or soups. The food is cooked from the heat of the base of the pan.	Place the food directly in the crispy pot, cover with the lid and place on the glass tray. It is not necessary to pre-heat. If required, stir during cooking. Please refer to recipes on recipe books.
<b>Steam</b>		The Magic Pot is suitable for steaming vegetables, potatoes, fish fillets, whole fish, and chicken breasts. Microwaves are absorbed by the base of the crispy pot which heats the water inside. This creates steam which cooks the food.	Pour 5 fl.oz (or specified in recipes) tap water into the crispy pot and place the steam tray inside. Place food directly on the steam tray. Cover with lid and place directly on the glass tray. Please refer to cooking chart on recipe book.

## Using the Magic Pot (continued)

Function	Accessory to Use	Concept	Instructions
<b>Crisping Grill</b>		Some foods cooked by microwave can have soft and soggy crusts. The crispy pot accessory will brown and crisp pizzas, quiches, pies, breaded products just as a conventional oven. The crispy pot works in three ways: heating the crispy pot by absorbing microwaves, heating the food directly by microwaves and heating the food from the broiling heater. The base of the crispy pot absorbs the microwaves and transfers them into heat. Then the heat is conducted through the crispy pot to the food. The heating effect is maximized by the non-stick surface.	For best results, pre-heat the crispy pot before cooking. Place directly on the glass tray and pre-heat on Microwave High power for 3 minutes. To assist browning, brush the pan with oil before preheating for items such as sausages and breaded products. Remove the crispy pot from the oven and place the food in the crispy pot. Use oven mitts as the crispy pot will be very hot. For best results, it is important that the food is placed on the crispy pot immediately after pre-heating. Performance cannot be guaranteed with a time delay. Please refer to cooking chart on recipe book.

### Caution:

When removing food from the microwave oven, be sure to use oven mitts. Contents will be very hot.

## Applicable models

NN-SN6*** NN-GN6***	NN-SN7*** NN-SD7*** NN-SE7***	NN-CD8*** NN-CV8***	NN-SN9*** NN-SD9*** NN-SE9***
------------------------	-------------------------------------	------------------------	-------------------------------------