

Panasonic®

Operating Instructions

Home Network System
Digital Cordless Handset

Model No. **KX-HNH100**



***Before initial use, see “Getting Started”
on page 9.***

Thank you for purchasing a Panasonic product.

Please read these operating instructions before using the unit and save them for future reference.

Consulte “Guía Rápida Española”, página 48.

For assistance, visit our Web site: www.panasonic.com/support for customers in the U.S.A. or Puerto Rico.

Please register your product: www.panasonic.com/prodreg

Table of Contents

Introduction		
Accessory information	3	
Expanding the Panasonic Home Network System	4	
Important Information		
About this system	6	
For your safety	6	
Important safety instructions	7	
For best performance	7	
Other information	8	
Getting Started		
Setting up	9	
Controls	11	
Display icons	11	
Registering the handset	12	
Language settings	12	
Other settings	12	
Making/Answering Calls		
Making calls	13	
Answering calls	13	
Caller list	14	
Useful features during a call	15	
Handset locator	17	
Intercom	17	
Phonebook		
Phonebook	18	
Speed dial	20	
Programming		
Menu list	21	
Alarm	26	
Silent mode	26	
Call block	27	
Other programming	28	
Wi-Fi® settings	28	
Voice mail service	29	
Answering System		
Answering system	31	
Activating the answering system	31	
Greeting message	31	
Listening to messages	32	
Advanced new message alerting features	33	
Remote operation	34	
Answering system settings	35	
Home Network System Integration		
Home Network System integration	37	
Security features	37	
Arming and disarming the system	37	
Smart plug features	39	
Home Network app features	39	
Accessing the User's Guide	40	
Useful Information		
Character table	41	
Error messages	41	
Troubleshooting	42	
Guía Rápida Española		
Guía Rápida Española	48	
Appendix		
Specifications	52	
FCC and other information	53	
Customer services	55	
Warranty (For United States and Puerto Rico)	56	
Index		
Index.....	58	

Accessory information

Supplied accessories

No.	Accessory item/Part number	Quantity
①	Rechargeable batteries*1	2
②	Handset cover*2/PNYNTGCA20SR	1
③	Charger/PNLC1055ZW	1

*1 See page 3 for replacement battery information.

*2 The handset cover comes attached to the handset.



Additional/replacement accessories

Please contact your nearest Panasonic dealer for sales information (page 55).

Accessory item	Model no./Specifications
Rechargeable batteries	HHR-4DPA*1
	<ul style="list-style-type: none"> To order, please visit www.panasonic.com/batterystore
	Battery type: <ul style="list-style-type: none"> Nickel metal hydride (Ni-MH) 2 x AAA (R03) size for each handset

*1 Replacement batteries may have a different capacity from that of the supplied batteries.

Other information

- Design and specifications are subject to change without notice.
- The illustrations in these instructions may vary slightly from the actual product.

Trademarks

- iPhone and iPad are registered trademarks of Apple Inc.
- Android is a trademark of Google Inc.
- Wi-Fi is a registered trademark of the Wi-Fi Alliance.
- All other trademarks identified herein are the property of their respective owners.

Introduction

Expanding the Panasonic Home Network System

The Panasonic Home Network System lets you create a powerful wireless network of cameras, sensors, and smart plugs in your home, and control them all with an easy-to-use mobile app. Compatible devices are explained below. For information about the Home Network app, refer to the User's Guide (page 40).

The maximum number of devices for each device type is listed below.

<p>Digital Cordless Handset (KX-HNH100: 6 max.)*1</p> <ul style="list-style-type: none">● Makes and receives calls using your home landline● Can be used to change the system's security mode● Displays system status● Receives notification when the sensors are triggered	
<p>Indoor Camera (KX-HNC200: 4 max.)*2</p> <ul style="list-style-type: none">● Full-color camera with built-in microphone for live monitoring and recording● Built-in visual sensor, audio sensor, and temperature sensor can be used to trigger other actions (camera recording, turning on a light, etc.)● Built-in microphone and speaker for two-way communication	
<p>Outdoor Camera (KX-HNC600: 4 max.)*2</p> <ul style="list-style-type: none">● Full-color camera with built-in microphone for live monitoring and recording● Built-in visual sensor and infrared sensor can be used to trigger other actions (camera recording, turning on a light, etc.)● Built-in microphone and speaker for two-way communication● Splashproof design for permanent, outdoor installation	
<p>Window/Door Sensor (KX-HNS101: 50 max.)*3</p> <ul style="list-style-type: none">● Detects when the corresponding window or door is opened● Can be used to trigger other events (camera recording, turning on a light, etc.)	
<p>Motion Sensor (KX-HNS102: 50 max.)*3</p> <ul style="list-style-type: none">● Detects motion in the surrounding area● Can be used to trigger other events (camera recording, turning on a light, etc.)	

Introduction

Smart Plug (KX-HNA101: 50 max.*3)

- Can be turned on and off when using the handset or Home Network app or when triggered by a sensor
- Built-in overcurrent detection for added peace of mind
- Power consumption is logged for your reference



- *1 Optional handsets may be a different color from that of the handset supplied as part of a pre-configured bundle.
- *2 A total of 4 cameras (including indoor cameras and outdoor cameras) can be registered to the hub.
- *3 A total of 50 sensors (including motion sensors and window/door sensors) and smart plugs can be registered to the hub.

Mobile devices

Your mobile devices: 8 max.

You can expand the system by installing the Home Network app on your mobile devices (smartphones, tablets, etc.) and registering your mobile devices to the hub.

See page 39 for more information about the Home Network app.

Note:

- You must configure the hub's Wi-Fi settings before you can use the app.



Important Information

About this system

This system is an auxiliary system; it is not designed to provide complete protection from property loss. Panasonic will not be held responsible in the event that property loss occurs while this system is in operation.

For your safety

To prevent severe injury and loss of life/property, read this section carefully before using the product to ensure proper and safe operation of your product.

WARNING

Power connection

- Use only the power source marked on the product.
- Do not overload power outlets and extension cords. This can result in the risk of fire or electric shock.
- Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire.
- Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire.
- Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact us at www.panasonic.com/contactinfo
- Unplug from power outlets and never touch the inside of the product if its casing has been broken open. Danger of electric shock exists.
- Never touch the plug with wet hands. Danger of electric shock exists.
- Do not connect non-specified devices.

Installation

- To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture.
- Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.
- Do not allow the AC adaptor or telephone line cord to be excessively pulled, bent or placed under heavy objects.

Operating safeguards

- Unplug the product from power outlets before cleaning. Do not use liquid or aerosol cleaners.
- Do not disassemble the product.
- Do not spill liquids (detergents, cleansers, etc.) onto the telephone line cord plug, or allow it to become wet at all. This may cause a fire. If the telephone line cord plug becomes wet, immediately pull it from the telephone wall jack, and do not use.
- Never put metal objects inside the product. If metal objects enter the product, turn off the circuit breaker and contact an authorized service center.

Medical

- Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids, to determine if they are adequately shielded from external RF (radio frequency) energy. The product operates between 1.92 GHz and 1.93 GHz with a peak transmission power of 115 mW.
- Do not use the product in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Important Information

CAUTION

Installation and location

- Never install wiring during a lightning storm.
- Never install telephone line jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.
- This product is unable to make calls when:
 - the handset batteries need recharging or have failed.
 - there is a power failure.
- Do not place metallic objects such as paperclips near the product. Metallic objects could cause a short circuit if they touch the charge contacts.

Battery

- We recommend using the batteries noted on page 3. **USE ONLY rechargeable Ni-MH batteries AAA (R03) size.**
- Do not mix old and new batteries.
- Do not open or mutilate the batteries. Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin. The electrolyte is toxic and may be harmful if swallowed.
- Exercise care when handling the batteries. Do not allow conductive materials such as rings, bracelets, or keys to touch the batteries, otherwise a short circuit may cause the batteries and/or the conductive material to overheat and cause burns.
- Charge the batteries provided with or identified for use with this product only, in accordance with the instructions and limitations specified in this manual.
- Only use a compatible charger to charge the batteries. Do not tamper with the charger. Failure to follow these instructions may cause the batteries to swell or explode.

Attention:



A nickel metal hydride battery that is recyclable powers the product you have purchased.

Please call 1-800-8-BATTERY (1-800-822-8837) for information on how to recycle this battery.

Important safety instructions

When using your product, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Do not use this product near water for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

SAVE THESE INSTRUCTIONS

For best performance

Hub location/avoiding noise

The hub and other compatible Panasonic units use radio waves to communicate with each other.

Important Information

- For maximum coverage and noise-free communications, place your hub:
 - at a convenient, high, and central location with no obstructions between the product and hub in an indoor environment.
 - away from electronic appliances such as TVs, radios, personal computers, wireless devices, or other phones.
 - facing away from radio frequency transmitters, such as external antennas of mobile phone cell stations. (Avoid putting the hub on a bay window or near a window.)
- Coverage and voice quality depends on the local environmental conditions.
- If the reception for a hub location is not satisfactory, move the hub to another location for better reception.

Environment

- Keep the product away from electrical noise generating devices, such as fluorescent lamps and motors.
- The product should be kept free from excessive smoke, dust, high temperature, and vibration.
- The product should not be exposed to direct sunlight.
- Do not place heavy objects on top of the product.
- When you leave the product unused for a long period of time, unplug the product from the power outlet.
- The product should be kept away from heat sources such as heaters, kitchen stoves, etc. It should not be placed in rooms where the temperature is less than 0 °C (32 °F) or greater than 40 °C (104 °F). Damp basements should also be avoided.
- The maximum communication range may be shortened when the product is used in the following places: Near obstacles such as hills, tunnels, underground, near metal objects such as wire fences, etc.
- Operating the product near electrical appliances may cause interference. Move away from the electrical appliances.
- The wireless communication range of each device in the system is approximately 50 m (160 feet) indoors and approximately 300 m

(1,000 feet) outdoors from the hub when unobstructed by other objects.

Other information

CAUTION: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Routine care

- **Wipe the outer surface of the product with a soft moist cloth.**
- Do not use benzene, thinner, or any abrasive powder.

Notice for product disposal, transfer, or return

- This product can store your private/confidential information. To protect your privacy/confidentiality, we recommend that you erase information such as phonebook or caller list entries from the memory before you dispose of, transfer, or return the product.


Notice

- This product is designed for use in the United States of America. Sale or use of this product in other countries may violate local laws.
- Cet appareil est conçu pour être utilisé aux États-Unis d'Amérique. La vente ou l'emploi de cet appareil dans certains autres pays peut constituer une infraction à la législation locale.
- Este producto está diseñado para usarse en los Estados Unidos de América. La venta o el empleo de este producto en ciertos países puede constituir violación de la legislación local.
- 本產品專為美國使用而設。若在其他國家銷售或使用，可能會違反當地法例。
- この製品は、日本国外での使用を目的として設計されており、日本国内での使用は法律違反となります。従って、当社では日本国内においては原則として修理などのサービスは致しかねます。

Setting up

Connections

- 1 Connect the AC adaptor to the power outlet.

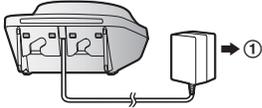


Wall mounting

Note:

- Make sure that the wall and the fixing method are strong enough to support the weight of the unit.


Drive the screws (A) (not supplied) into the wall.

- B 27.2 mm (1 1/16 inches)

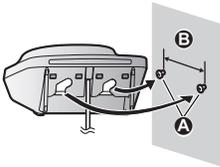

Battery installation

- USE ONLY rechargeable Ni-MH batteries AAA (R03) size (A).
- Do NOT use Alkaline/Manganese/Ni-Cd batteries.
- Confirm correct polarities (+, -).

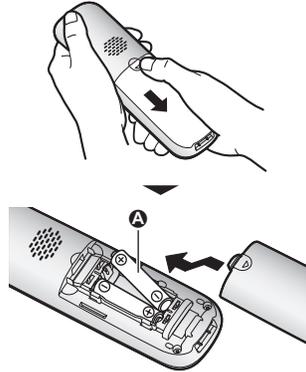

Battery charging

Charge for about 7 hours.

- Confirm "Charging" is displayed (A).
- When the batteries are fully charged, "Fully charged" is displayed.



Getting Started

Note when setting up

Note for connections

- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.

Note for battery installation

- Use the supplied rechargeable batteries. For replacement, we recommend using the Panasonic rechargeable batteries noted on page 3, 7.

Note for battery charging

- It is normal for the handset to feel warm during charging.
- Clean the charge contacts of the handset and charger with a soft and dry cloth once a month. Before cleaning the unit, disconnect from power outlets. Clean more often if the unit is exposed to grease, dust, or high humidity.

Battery level

Icon	Battery level
	High
	Medium
	Low
	Needs charging.
	Empty

Panasonic Ni-MH battery performance (supplied batteries)

Operation	Operating time
In continuous use	10 hours max.*1
Not in use (standby)	120 hours max.*1

*1 If eco mode is on.

Note:

- Actual battery performance depends on usage and ambient environment.


Intelligent eco mode

This feature automatically reduces handset power consumption by suppressing handset transmission power when the handset is close to the hub.

- When this feature is activated, **ECO** is displayed.
- Eco mode is turned off when the clarity booster is activated (page 16).

Controls

Handset

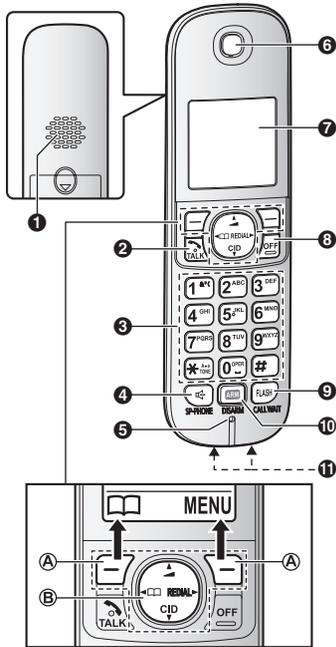

- 1 Speaker
 - 2 [TALK]
 - 3 Dial keypad
 - 4 [SP-PHONE: Speakerphone]
 - 5 Microphone
 - 6 Receiver
 - 7 Display
 - 8 [OFF]
 - 9 [FLASH][CALL WAIT]
 - 10 [ARM][DISARM]
 - 11 Charge contacts
- Control type
 (A) Soft keys

By pressing a soft key, you can select the feature shown directly above it on the display.

ⓑ Navigator key

- [▲], [▼], [◀], or [▶]: Scroll through various lists and items.
- ◀ (Volume: [▲] or [▼]): Adjust the receiver or speaker volume while talking.
- [◀] □: View the phonebook entry.
- [▶] □: REDIAL: View the redial list.
- [▼] □: CID (Caller ID): View the caller list.

Display icons

Handset display items

Item	Meaning
	Within hub range
	Out of hub range
	The line is in use. <ul style="list-style-type: none"> • When blinking: The call is put on hold. • When blinking rapidly: An incoming call is now being received.
	Eco mode is on. (page 10)
	Noise reduction is set. (page 16)
	Equalizer is set. (page 16)
	Speakerphone is on. (page 13)
	Ringer volume is off. (page 24)
	Silent mode is on. (page 26)
	Call sharing mode is off. (page 25)
	Alarm is on. (page 26)
	Handset number
	At Home mode is set. (page 37)
	Away mode is set. (page 37)

Getting Started

Item	Meaning
	Answering system is on. (page 31)
	Battery level
	Blocked call (page 27)
	Outdoor/Indoor camera
	Door sensor
	Window sensor
	Motion sensor
BOOST	Clarity booster is on. (page 16)
In use	Answering system is being used by another handset
Line in use	Someone is using the line.

Registering the handset

Registering a handset to the hub

This procedure is not required for devices that were included as part of a bundle.

Before you can use the handset, it must be registered to the hub.
If you purchased handsets separately (i.e., not as part of a bundle), use the following procedure to register each handset to the hub.

- Hub:**
Press and hold **[☎]A HANDSET/LOCATOR** until the LED indicator blinks in green.
 - If all registered handsets start ringing, press **[☎]A HANDSET/LOCATOR** again to stop, then repeat this step.
- Handset:**
Place the handset on the charger, then wait until a long beep sounds.

Deregistering a handset

A handset can cancel its own registration to the hub, or other handsets registered to the

same hub. This allows the handset to end its wireless connection with the system.

- [MENU]#[1][3][1]**
 - All handsets registered to the hub are displayed. If mobile devices (smartphones, tablets, etc.) are registered to the hub, you can also select and deregister them using this procedure.
- [↕]**: Select the handset you want to cancel. → **[SELECT]**
- [↕]**: “Yes” → **[SELECT]** → **[OFF]**

Language settings

Display language

- [MENU]#[1][1][0]**
- [↕]**: Select the desired setting. → **[SAVE]**
- [OFF]**

Voice guidance language

- [MENU]#[1][1][2]**
- [↕]**: Select the desired setting.
- [SAVE]** → **[OFF]**

Other settings

Dialing mode

If you cannot make calls, change this setting according to your telephone line service. The default setting is “Tone”.

“Tone”: For tone dial service.
“Pulse”: For rotary/pulse dial service.

- [MENU]#[1][2][0]**
- [↕]**: Select the desired setting.
- [SAVE]** → **[OFF]**

Making calls

- 1 Lift the handset and dial the phone number.
 - To correct a digit, press **[CLEAR]**.
- 2 **[📞]**
- 3 When you finish talking, press **[OFF]** or place the handset on the charger.

Using the speakerphone

- 1 Dial the phone number and press **[📞]**.
- 2 When you finish talking, press **[OFF]**.

Note:

- To switch back to the receiver, press **[📞]/[📞]**.

Adjusting the receiver or speaker volume

Press **[▲]** or **[▼]** repeatedly while talking.

Making a call using the redial list

The last 5 phone numbers dialed (each 48 digits max.) are stored in the redial list.

- 1 **[▶] REDIAL**
- 2 **[↕]**: Select the desired phone number.
- 3 **[📞]**

Erasing a number in the redial list

- 1 **[▶] REDIAL**
- 2 **[↕]**: Select the desired phone number.
→ **[ERASE]**
- 3 **[↕]**: "Yes" → **[SELECT]** → **[OFF]**

Pause (for PBX/long distance service users)

A pause is sometimes required when making calls using a PBX or long distance service. When storing a calling card access number and/or PIN in the phonebook, a pause is also needed (page 19).

Example: If you need to dial the line access number "9" when making outside calls with a PBX:

- 1 **[9] → [▲] (Pause)**
- 2 Dial the phone number. → **[📞]**

Note:

- A 3.5 second pause is inserted each time **[▲] (Pause)** is pressed.

Answering calls

- 1 Lift the handset and press **[📞]** or **[📞]** when the unit rings.
- 2 When you finish talking, press **[OFF]** or place the handset on the charger.

Any key answer: You can answer the call by pressing any dial key.

Auto talk: You can answer calls simply by lifting the handset (page 24).

Temporary handset ringer off: You can turn the ringer off temporarily by pressing **[🔕]**.

Adjusting the ringer volume

Press **[▲]** or **[▼]** repeatedly to select the desired volume while ringing.

Caller ID features

When an outside call is being received, the caller information is displayed.

Important:

- This unit is Caller ID compatible. To use Caller ID features, you must subscribe to a Caller ID service. Contact your service provider/telephone company for details.
- If the unit cannot receive caller information, the following is displayed:
 - "Out of area": The caller dials from an area which does not provide a Caller ID service.
 - "Private caller": The caller requests not to send caller information.
 - "Long distance": The caller makes a long distance call.

Making/Answering Calls

- If the unit is connected to a PBX system, caller information may not be properly received. Contact your PBX supplier.

Missed calls

If a call is not answered, the unit treats it as a missed call. The display shows “**Missed call**”.

Note:

- Even when there are unviewed missed calls, “**Missed call**” disappears from the standby display if the following operation is performed by one of the units:
 - A handset is replaced on the charger.
 - Pressing **[OFF]** on a handset.

Phonebook name display

When caller information is received and it matches a phone number stored in the phonebook, the stored name in the phonebook is displayed and logged in the caller list.

Talking Caller ID

This feature lets you know who is calling without looking at the display.

To use this feature, you must:

- subscribe to a Caller ID service of your service provider/telephone company.
- turn this feature on (page 24).

When caller information is received, the handsets announce the caller’s name or phone number received from your service provider/telephone company following every ring.

The unit announces in English only.

- Name pronunciation may vary. This feature may not pronounce all names correctly.
- Caller ID service has a limit of how many characters can be displayed. If the caller’s name is too long, the unit may not be able to display or announce the entire name.

Phonebook name announcement

When caller information is received and it matches a phone number stored in the

phonebook, the stored name in the phonebook is announced.

Caller list

The last 50 callers information is logged in the caller list from the most recent call to the oldest.

Making a call from the caller list

- 1 **[▼]** CID
- 2 Press **[▼]** to search from the most recent call, or **[▲]** to search from the oldest call.
- 3 To call back, press **[↶]**.
To exit, press **[OFF]**.

Note:

- If the entry has already been viewed or answered, “**✓**” is displayed.

Editing a caller’s phone number in the caller list

You can edit a phone number in the caller list by removing its area code and/or the long distance code “1”.

- 1 **[▼]** CID
- 2 **[↕]**: Select the desired entry.
- 3 **[MENU]** → **[↕]**: “**Edit**” → **[SELECT]**
- 4 Press **[EDIT]** repeatedly until the phone number is shown in the desired format.
- 5 **[↶]**

Note:

- The number edited in step 4 will not be saved in the caller list.

Caller ID number auto edit feature

Once you call back an edited number, the unit which was used to call back remembers the area code and format of the edited number. The next time someone calls from the same area code, caller information is customized by the unit as follows:

Making/Answering Calls

- When the call is being received, the Caller ID number is displayed in the same format as the edited number.
- After the call has ended, the caller's phone number is displayed in the same format as the edited number, when reviewed from the caller list.

For example, you can use this feature to set the unit to ignore the area code of callers in your area, so that you can call these local numbers using caller information without dialing the area code.

To activate this feature, you must edit an entry in the caller list, then call that number. After that, phone numbers from that caller's area code are edited automatically.

This feature can be set for each unit (page 24). The default setting is "on".

Note:

- Phone numbers from the 4 most recently edited area codes are automatically edited.

Erasing information from caller list

- 1 [▼] CID
- 2 [↕]: Select the desired entry.
- 3 [ERASE] → [↕]: "Yes" → [SELECT]
- 4 [OFF]

Erasing all information from caller list

- 1 [▼] CID
- 2 [ERASE] → [↕]: "Yes" → [SELECT]
- 3 [OFF]

Useful features during a call

Hold

- 1 Press [MENU] during an outside call.
- 2 [↕]: "Hold" → [SELECT]
- 3 To release hold, press [↶].

Note:

- After holding for 10 minutes, the call is disconnected.

Mute

- 1 Press [MUTE] during a call.
- 2 To return to the call, press [MUTE].

Note:

- [MUTE] is a soft key visible on the display during a call.

Flash

[FLASH] allows you to use the special features of your host PBX such as transferring an extension call, or accessing optional telephone services.

Note:

- To change the flash time, see page 25.

Answering a second call (call waiting)

If you receive a second call while you are talking on the phone, the handset will let you know by sounding a call waiting tone. If caller information is also received, you can confirm the information on the screen and answer the second call.

Important:

- You may need to subscribe to your phone service provider's call waiting service in order to answer a second call. Consult your phone service provider for information about this feature.

- 1 Press [CALL WAIT] to answer the 2nd call.
- 2 To switch between calls, press [CALL WAIT].

Note:

- Please contact your service provider/telephone company for details and availability of this service in your area.

Making/Answering Calls

Temporary tone dialing (for rotary/pulse service users)

Press **[*]** (TONE) before entering access numbers which require tone dialing.

Handset clarity booster

This feature can improve sound clarity when the handset is used in an area where there may be interference. During an outside call, this feature is turned on automatically when necessary.

- When this feature is turned on, **[BOOST]** is displayed.

Note:

- This feature does not function when an outdoor camera or indoor camera is registered to the hub.

Handset noise reduction

This feature allows you to hear the voice of the person you are talking to clearly, by reducing the surrounding noise coming from the other party's telephone.

- 1 Press **[MENU]** while talking.
- 2 **[↕]**: Select "Noise reduction on" or "Noise reduction off". → **[SELECT]**

Note:

- Depending on the environment where this handset is being used, this feature may not be effective.
- This feature is not available using the speakerphone.

Handset equalizer

This feature clarifies the voice of the person you are talking to, producing a more natural-sounding voice that is easier to hear and understand.

- 1 Press **[MENU]** while talking.
- 2 **[↕]**: "Equalizer" → **[SELECT]**
- 3 **[↕]**: Select the desired setting. → **[OK]**

Note:

- Depending on the condition and quality of your telephone line, this feature may emphasize existing line noise. If it becomes difficult to hear, turn this feature off.
- This feature is not available while using the speakerphone.
- When both the "Equalizer" setting and noise reduction are activated, **[NR]** is shown on the display.

Call share

You can join an existing outside call. To join the conversation, press **[↶]** when the other unit is on an outside call.

Note:

- A maximum of 3 parties (including 1 outside party) can join a conversation using 2 extensions. (**3-way conference**)
- To prevent other users from joining your conversations with outside callers, turn call sharing mode off (page 25).

Transferring calls, conference calls

Outside calls can be transferred or a conference call with an outside party can be made between 2 handsets.

- 1 During an outside call, press **[MENU]**.
- 2 **[↕]**: "Intercom" → **[SELECT]**
- 3 **[↕]**: Select the desired unit. → **[SELECT]**
- 4 Wait for the paged party to answer.
 - If the paged party does not answer, press **[↶]** to return to the outside call.
- 5 **To complete the transfer:**
Press **[OFF]**.
To establish a conference call:
[MENU] → **[↕]**: "Conf." → **[SELECT]**
 - To leave the conference, press **[OFF]**. The other 2 parties can continue the conversation.
 - To put the outside call on hold:
[MENU] → **[↕]**: "Hold" → **[SELECT]**

To resume the conference: **[MENU]**
→ **[↕]**: "Conf ." → **[SELECT]**

- To cancel the conference: **[MENU]** → **[↕]**: "Stop conference" → **[SELECT]**

You can continue the conversation with the outside caller.

Note:

- You can also select your mobile device in this feature using a handset, if your mobile device is registered to the hub. For more information, refer to the User's Guide (page 40).

Handset locator

You can locate a misplaced handset by paging it.

- 1 Hub:** Press **[•)]A HANDSET/LOCATOR]**.
 - All registered handsets beep for 1 minute.
- 2 To stop paging:**
Hub:
Press **[•)]A HANDSET/LOCATOR]**.
Handset:
Press **[OFF]**.

Intercom

Intercom calls can be made between handsets.

Note:

- When paging unit(s), the paged unit(s) beeps for 1 minute.
- If you receive an outside call while talking on the intercom, the interrupt tone sounds. To answer the call, press **[OFF]**, then press **[↶]**.
- You can also select your mobile device in this feature using a handset, if your mobile device is registered to the hub. For more information, refer to the User's Guide (page 40).

Making an intercom call

- 1 [MENU]** → **[↕]**: "Intercom" → **[SELECT]**
- 2 [↕]**: Select the desired unit. → **[SELECT]**
- 3** When you finish talking, press **[OFF]**.

Note:

- You can also use the **[INT]** soft key, if displayed, to make intercom calls.

Answering an intercom call

- 1** Press **[↶]** to answer the page.
- 2** When you finish talking, press **[OFF]**.

Phonebook

Phonebook

You can add 500 names (16 characters max.) and phone numbers (24 digits max.) to the phonebook, and assign each phonebook entry to the desired group.

Important:

- All entries can be shared by any registered handset.
- You can copy contacts from your mobile device to the unit's phonebook if your mobile device is registered to the hub. If you store phone numbers in your mobile device's contacts using the international dialing symbol "+" and the country code, we recommend that you store phone number conversion codes in the hub. For more information, refer to the User's Guide (page 40).

Adding phonebook entries

- 1 **[□□]** or **[←] □□** → **[MENU]**
- 2 **[↕]**: "Add new entry" → **[SELECT]**
- 3 Enter the party's name. → **[OK]**
 - For information about entering characters, see "Character table", page 41.
- 4 Enter the party's phone number. → **[OK]**
- 5 **[↕]**: Select the desired group. → **[SELECT]** 2 times → **[OFF]**

Storing a redial list number to the phonebook

Phone numbers of up to 24 digits can be stored in the phonebook.

- 1 **[▶]** REDIAL
- 2 **[↕]**: Select the desired phone number. → **[SAVE]**
- 3 To store the name, continue from step 3, "Editing entries", page 19.

Storing caller information to the phonebook

- 1 **[▼]** CID
- 2 **[↕]**: Select the desired entry.
 - To edit the number: **[MENU]** → **[↕]**: "Edit" → **[SELECT]**
Press **[EDIT]** repeatedly until the phone number is shown in the desired format. And then, press **[SAVE]**. Go to step 5.
- 3 **[MENU]**
- 4 **[↕]**: "Save CID" → **[SELECT]**
- 5 **[↕]**: "Phonebook" → **[SELECT]**
- 6 Continue from step 3, "Editing entries", page 19.

Groups

Groups can help you find entries in the phonebook quickly and easily. You can change the names of groups assigned for phonebook entries ("Friends", "Family", etc.). By assigning different ringer tones for different groups of callers, you can identify who is calling (ringer ID), if you have subscribed to Caller ID service.

Changing group names/setting ringer ID

The default group name is "Group 1" to "Group 9".

- 1 **[□□]** or **[←] □□** → **[MENU]**
- 2 **[↕]**: "Group" → **[SELECT]**
- 3 **[↕]**: Select the desired group. → **[SELECT]**
- 4 **To change group names**
[↕]: "Group name" → **[SELECT]** → Edit the name (10 characters max.). → **[SAVE]**
To set group ringer tone
[↕]: Select the current setting of the group ringer tone. → **[SELECT]** → **[↕]**: Select the desired ringer tone. → **[SAVE]**
- 5 **[OFF]**

Finding and calling from a phonebook entry

- 1 **[□□]** or **[←] □□**
- 2 **To scroll through all entries**
[↕]: Select the desired entry.
To search by first character
 - ① Press the dial key (**[0]** to **[9]**, or **[#]**) which contains the character you are searching for (page 41).
 - ② **[↕]**: Scroll through the phonebook if necessary.**To search by query**
 You can narrow down the search to enter the first characters of a name.
 - ① **[X]** → To search for the name, enter the first characters (up to 4) in uppercase (page 41). → **[OK]**
 - ② **[↕]**: Scroll through the phonebook if necessary.**To search by group**
 - ① **[GROUP]**
 - ② **[↕]**: Select the desired group. → **[SELECT]**
 - ③ **[↕]**: Scroll through the phonebook if necessary.
- 3 **[↶]**

Editing entries

- 1 Find the desired entry (page 19).
- 2 **[MENU]** → **[↕]**: "Edit" → **[SELECT]**
- 3 Edit the name if necessary. → **[OK]**
- 4 Edit the phone number if necessary. → **[OK]**
- 5 **[↕]**: Select the desired group (page 18). → **[SELECT]** 2 times
- 6 **[OFF]**

Erasing entries

Erasing an entry

- 1 Find the desired entry (page 19).
- 2 **[MENU]** → **[↕]**: "Erase" → **[SELECT]**
- 3 **[↕]**: "Yes" → **[SELECT]**

- 4 **[OFF]**

Erasing all entries

- 1 **[□□]** or **[←] □□** → **[MENU]**
- 2 **[↕]**: "Erase all" → **[SELECT]**
- 3 **[↕]**: "Yes" → **[SELECT]**
- 4 **[↕]**: "Yes" → **[SELECT]**
- 5 **[OFF]**

Chain dial

This feature allows you to dial phone numbers in the phonebook while you are on a call. This feature can be used, for example, to dial a calling card access number or bank account PIN that you have stored in the phonebook, without having to dial manually.

- 1 During an outside call, press **[MENU]**.
- 2 **[↕]**: "Phonebook" → **[SELECT]**
- 3 **[↕]**: Select the desired entry.
- 4 Press **[CALL]** to dial the number.

Note:

- When storing a calling card access number and your PIN in the phonebook as one phonebook entry, press **[▲]** (Pause) to add pauses after the number and PIN as necessary (page 13).
- If you have rotary/pulse service, you need to press **[X]** (TONE) before pressing **[MENU]** in step 1 to change the dialing mode temporarily to tone. When adding entries to the phonebook, we recommend adding **[X]** (TONE) to the beginning of phone numbers you wish to chain dial (page 18).

Phonebook

Speed dial

You can assign 1 phone number to each of the dial keys ([1] to [9]) on the handset.

Adding phone numbers to speed dial keys

■ By entering phone numbers:

- 1 Press and hold the desired speed dial key ([1] to [9]). → **[ADD]**
- 2 [↕]: "Manual" → **[SELECT]**
- 3 Enter the party's name (16 characters max.). → **[OK]**
- 4 Enter the party's phone number (24 digits max.). → **[OK]**
- 5 **[SELECT]** → **[OFF]**

■ From the phonebook:

- 1 Press and hold the desired speed dial key ([1] to [9]). → **[ADD]**
- 2 [↕]: "Phonebook" → **[SELECT]**
- 3 [↕]: Select the desired entry.
- 4 **[SAVE]** → **[OFF]**

Note:

- If you edit a phonebook entry which is assigned to a speed dial key, the edited entry does not transfer to the speed dial key.

Editing an entry

- 1 Press and hold the desired speed dial key ([1] to [9]). → **[MENU]**
- 2 [↕]: "Edit" → **[SELECT]**
- 3 Edit the name if necessary. → **[OK]**
- 4 Edit the phone number if necessary. → **[OK]**
- 5 **[SELECT]** → **[OFF]**

Erasing an entry

- 1 Press and hold the desired speed dial key ([1] to [9]). → **[MENU]**

- 2 [↕]: "Erase" → **[SELECT]**
- 3 [↕]: "Yes" → **[SELECT]**
- 4 **[OFF]**

Viewing an entry/Making a call

- 1 Press and hold the desired speed dial key ([1] to [9]).
- 2 To make a call, press [📞].

Menu list

To access the features, there are 2 methods.

■ Scrolling through the display menus

- 1 [MENU]
- 2 Press [▼] or [▲] to select the desired main menu. → [SELECT]
- 3 Press [▼] or [▲] to select the desired item from the next sub-menus. → [SELECT]
- 4 Press [▼] or [▲] to select the desired setting. → [SAVE]

■ Using the direct command code

- 1 [MENU] → Enter the desired code.
Example: Press [MENU] [F1] [6] [0].
- 2 Select the desired setting. → [SAVE]

Note:

- To exit the operation, press [OFF].
- In the following table, < > indicates the default settings.
- In the following table, (1/2) indicates the reference page number.
- Display menu order and sub-menu may vary depending on your model.

Display menu tree and direct command code table

Main menu:  "Home network"

Sub-menu 1	Sub-menu 2	Settings	Code	
Arm/Disarm ^{*1}	—	—	#800	37
Check sensor status	—	—	#801	38
Smart Plug	—	—	#802	39

Programming

Sub-menu 1	Sub-menu 2	Settings	Code	
Settings	Change Disarm PIN	–	#810	38
	At Home – Alert volume	Handset Off-6 <3>	#803	38
		Hub Off-6 <3>	#*803	
	At Home – Entry alert volume	Handset Off-6 <3>	#808	
		Hub Off-6 <3>	#*808	
	Away – Alert volume	Handset Off-6 <6>	#804	
		Hub Off-6 <6>	#*804	
	Away – Entry alert volume	Handset Off-6 <3>	#807	
Hub Off-6 <3>		#*807		
Away – Exit alert volume	Off-6 <3>	#805		
Talking notification	<On> Off	#809	38	

Main menu:  “Phonebook”

Operation	Code	
Viewing the phonebook entry.	#280	19

Main menu:  “Caller list”

Operation	Code	
Viewing the caller list.	#213	14

Main menu:  “Answering device”

Sub-menu 1	Sub-menu 2	Settings	Code	
Play new msg. (msg.: messages)	–	–	#323	32
Play all msg.	–	–	#324	32
Erase all msg.*1	–	–	#325	33

Programming

Sub-menu 1	Sub-menu 2	Settings	Code	
Greeting	Record greeting* ¹	-	#302	31
	Check greeting	-	#303	32
	Pre-recorded* ¹ (Reset to pre-recorded greeting)	-	#304	32
New message alert* ¹	Outgoing call - On/Off	On <Off>	#338	33
	Outgoing call - Notification to	-		
	Outgoing call - Remote code	Activate <Inactivate>		
	Hub beep	On <Off>	#339	33
Settings	Ring count* ¹	2-7 rings <4 rings> Toll saver	#211	36
	Recording time* ¹	1 min <3 min> Greeting only* ²	#305	36
	Remote code* ¹	<111>	#306	34
	Screen call	<On> Off	#310	35
	Answering device On/ Off	On <Off>	#343	31
Answer on* ¹	-	-	#327	31
Answer off* ¹	-	-	#328	31

Main menu:  "V.M. access"

Operation	Code	
Listening to voice mail messages.	#330	30

Main menu:  "Intercom"

Operation	Code	
Paging the desired unit.	#274	17

Programming

Main menu:  "Initial setting"

Sub-menu 1	Sub-menu 2	Settings	Code	
Ringer setting	Ringer volume	Off-6 <6>	#160	-
	Ringer tone ^{*3, *4}	<Tone 1>	#161	-
	Silent mode - On/Off	On <Off>	#238	26
	Silent mode - Start/End	<11:00 PM/06:00 AM>	#237	27
	Silent mode - Select group	-	#241	27
Alarm	-	Once Daily <Off>	#720	26
Talking Caller ID	-	<On> Off	#162	14
Handset name	-	-	#104	28
Call block ^{*1}	Block a single number	-	#217	27
	Block range of numbers	-		
	Block unknown CID (CID: Caller ID)	On <Off>	#240	28
	First ring ^{*1}	<On> Off	#173	28
Speed dial	-	-	#261	20
Voice mail	Store VM access# ^{*1} (VM: Voice mail)	-	#331	30
	VM tone detect ^{*1}	<On> Off	#332	30
LCD contrast (Display contrast)	-	Level 1-4 <2>	#145	-
Key tone	-	<On> Off	#165	-
Caller ID edit (Caller ID number auto edit)	-	<On> Off	#214	14
Auto talk ^{*5}	-	On <Off>	#200	13

Programming

Sub-menu 1	Sub-menu 2	Settings	Code	
Set tel line	Set dial mode*1	Pulse <Tone>	#120	12
	Set flash time*1,*6	900 ms <700 ms> 600 ms 400 ms 300 ms 250 ms 200 ms 160 ms 110 ms 100 ms 90 ms 80 ms	#121	15
	Set line mode*1,*7	A 	#122	–
Call sharing*1	–	<On> Off	#194	16
Network settings	Current status	–	#526	29
	Wi-Fi settings	–	#523	29
	IP settings	<Auto (DHCP)> Manual (Static)	#500	29
	Reset network	–	#730	29
Registration	Register handset	–	#130	12
	Deregistration*2	–	#131	12
Change language	Display	<English> Español	#110	12
	Voice prompt*1	<English> Español	#112	12

Main menu:  “Customer support”

Operation	Code	
Displaying customer support Web address.	#680	–

- *1 If you program these settings using one of the units, you do not need to program the same item using another unit.
- *2 This menu is not displayed when scrolling through the display menus. It is only available in direct command code.
- *3 If you subscribe to a distinctive ring service (such as IDENT-A-RING), select a tone (tone 1 to 2). If you select a melody, you cannot distinguish lines by their ringers.
- *4 The preset melodies in this product (“Tone 3” - “Melody 10”) are used with permission of © 2012 Copyrights Vision Inc.
- *5 If you subscribe to a Caller ID service and want to view the caller’s information after lifting up the handset to answer a call, turn off this feature.

For assistance, please visit www.panasonic.com/support

25

Programming

- *6 The flash time depends on your telephone exchange or host PBX. Contact your PBX supplier if necessary. The setting should stay at “700 ms” unless pressing **[FLASH]** fails to pick up the waiting call.
- *7 Generally, the line mode setting should not be changed. This setting automatically maintains receiver volume at the proper level depending on the current telephone line condition. Set the line mode to “A” if telephone line condition is not good.

Alarm

An alarm sounds at the set time for 3 minutes once or daily. Alarm can be set for each handset.

Important:

- Make sure the unit's date and time setting is correct. The time setting of the system is configured with the date and time of the mobile device registered to the hub. For more information, refer to the System Setup Guide of the hub.

- 1 **[MENU]** **[#]** **[7]** **[2]** **[0]**
- 2 **[↕]**: Select the desired alarm option. → **[SELECT]**

“Off” Turns alarm off. Go to step 7.
“Once” An alarm sounds once at the set time.
“Daily” An alarm sounds daily at the set time. Go to step 4.

- 3 Enter the desired month and date. → **[OK]**
- 4 Set the desired time.
- 5 **[X]**: Select “AM” or “PM”. → **[OK]**
- 6 **[↕]**: Select the desired alarm tone. → **[SAVE]**
 - We recommend selecting a different ringer tone from the one used for outside calls.
- 7 **[SELECT]** → **[OFF]**

Note:

- To stop the alarm, press **[OFF]** or place the handset on the charger.

- When the handset is in use, the alarm will not sound until the handset is in standby mode.

Silent mode

Silent mode allows you to select a period of time during which the handset will not ring for outside calls. This feature is useful for time periods when you do not want to be disturbed, for example, while sleeping. Silent mode can be set for each unit.

Using the phonebook's group feature (page 18), you can also select groups of callers whose calls override silent mode and ring the handset (Caller ID subscribers only).

Important:

- Make sure the unit's date and time setting is correct. The time setting of the system is configured with the date and time of the mobile device registered to the hub. For more information, refer to the System Setup Guide of the hub.
- If you have set the alarm, the alarm sounds even if the silent mode is turned on.

Turning silent mode on/off

- 1 **[MENU]** **[#]** **[2]** **[3]** **[8]**
- 2 **[↕]**: Select the desired setting. → **[SAVE]**
 - If you select “Off”, press **[OFF]** to exit.
- 3 Enter the desired hour and minute you wish to start this feature.
- 4 **[X]**: Select “AM” or “PM”. → **[OK]**
- 5 Enter the desired hour and minute you wish to end this feature.
- 6 **[X]**: Select “AM” or “PM”.

7 [SAVE] → [OFF]

Changing the start and end time

- 1 [MENU]#237
- 2 Continue from step 3, "Turning silent mode on/off", page 26.

Selecting groups to bypass silent mode

- 1 [MENU]#241
- 2 Select your desired groups by pressing 1 to 9.
 - "✓" is displayed next to the selected group numbers.
 - To cancel a selected group, press the same dial key again. "✓" disappears.
- 3 [SAVE] → [OFF]

Call block

This feature rejects calls from unwanted callers (Caller ID subscribers only). The following items are available when storing phone numbers in the call block list (250 max.).

- "Block a single number": The unit can reject calls from specific phone numbers.
- "Block range of numbers": The unit can reject calls that begin with a number stored in the call block list, such as a toll-free phone number prefix or certain area codes.

You can also set the unit to reject calls that do not have a phone number.

When a call is received, the unit rings briefly*1 while caller information is being received. If the caller's phone number matches an entry in the call block list, the unit emits no sound to the caller, and disconnects the call.

*1 This is called first ring. If you do not want the first ring to sound, turn this setting to "Off" (page 28).

Important:

- Rejected calls are logged in the caller list.

Storing unwanted callers

Storing a single phone number

Important:

- We recommend storing 10 digits (including the area code). If only 7 digits are stored, all numbers that have the same last 7 digits will be blocked.

■ From the caller list:

- 1 [▼] CID
- 2 [↕]: Select the entry to be blocked.
 - To edit the number: [MENU] → [↕]: "Edit" → [SELECT]
Press [EDIT] repeatedly until the phone number is shown in the 10-digit format. And then, press [SAVE]. Go to step 5.

- 3 [MENU]
- 4 [↕]: "Save CID" → [SELECT]
- 5 [↕]: "Call block" → [SELECT]
- 6 [↕]: "Yes" → [SELECT]
- 7 Edit the phone number if necessary (24 digits max.).

8 [SAVE] → [OFF]

■ By entering phone numbers:

- 1 [MENU]#217
- 2 [↕]: "Block a single number" → [SELECT]
- 3 [MENU] → [↕]: "Add" → [SELECT]
- 4 Enter the phone number (24 digits max.).
 - To erase a digit, press [CLEAR].
- 5 [SAVE] → [OFF]

Storing a range of numbers

- 1 [MENU]#217
- 2 [↕]: "Block range of numbers" → [SELECT]
- 3 [MENU] → [↕]: "Add" → [SELECT]
- 4 Enter the desired number (2-8 digits).
 - To erase a digit, press [CLEAR].
- 5 [SAVE] → [OFF]

Programming

Blocking incoming calls that have no phone number

You can reject calls when no phone number is provided, such as private callers or out of area calls.

- 1 [MENU]#240
- 2 [↕]: Select the desired setting. →
[SAVE] → [OFF]

Setting the first ring for the call block list

If you do not want the first ring from a number on the call block list to sound, turn the first ring setting to "Off". The default setting is "On".

- 1 [MENU]#173
- 2 [↕]: Select the desired setting. →
[SAVE] → [OFF]

Viewing/editing/erasing call block numbers

- 1 [MENU]#217
- 2 [↕]: "Block a single number" or "Block range of numbers" →
[SELECT]
- 3 [↕]: Select the desired entry.
 - To exit, press [OFF].
- 4 **To edit a number:**
[EDIT] → Edit the number. → [SAVE] → [OFF]
To erase a number:
[ERASE] → [↕]: "Yes" → [SELECT] → [OFF]

Note:

- When editing, press the desired dial key to add, [CLEAR] to erase.

Erasing all call block numbers

- 1 [MENU]#217
- 2 [↕]: "Block a single number" or "Block range of numbers" →
[SELECT]

- 3 [MENU] → [↕]: "Erase all" →
[SELECT]
- 4 [↕]: "Yes" → [SELECT]
- 5 [↕]: "Yes" → [SELECT] → [OFF]

Other programming

Changing the handset name

You can customize the name of your handset. This can help you easily identify handsets when making intercom calls, transferring calls to other handsets, etc. You can select whether or not the handset name is displayed in standby mode. The default setting is "Off" and the default handset name is "Handset 1" to "Handset 6".

- 1 [MENU]#104
- 2 Enter the desired name (10 characters max.). → [SAVE]
- 3 [↕]: Select the desired setting. →
[SELECT] 2 times → [OFF]

Wi-Fi® settings

You can use the Home Network app to access the system from your mobile device (smartphone, tablet, etc.). The app offers a variety of features that you can enjoy even when away from home. For more information about the app, see page 39.

In order to access the system from your mobile device, you must first configure the hub to connect to your wireless router.

Note:

- Make sure your wireless router is turned on and functioning.
- Make sure that you know your wireless router's Wi-Fi settings, including its SSID (wireless network name), security password, etc. In some situations, you may also need to know the IP-related settings required in order for the hub to connect to your wireless router, including your wireless router's IP address, subnet mask, etc.

- Make sure you have the operating instructions included with your wireless router handy.
- The hub cannot find your wireless router if the wireless router does not broadcast its SSID. If there is a “stealth mode” setting, turn it off; if there is a “SSID broadcast” setting, turn it on. Change the appropriate setting before performing this procedure, and then change it back when finished.

Wi-Fi network access settings

- [MENU]# [5] [2] [3]**
 - The hub searches for available wireless networks and “Searching . . .” is displayed on the handset.
 - When searching is complete, a list of available wireless networks is displayed, including the SSID, security setting, and signal strength.
- [↕]:** Select your wireless router’s SSID. → **[SELECT]**
- Confirm the SSID and then press **[OK]**.
- Enter the password required to access the wireless network. → **[OK]**
 - For information about entering characters, see “Character table”, page 41.
 - After the hub connects to the wireless router, “Connected to” and your wireless router’s SSID is displayed.
- [OFF]**

Advanced configuration (static IP settings)

After using the procedure explained in “Wi-Fi network access settings”, page 29, use the procedure below to set the hub’s IP settings manually if necessary.

This procedure is not necessary for most users.

- [MENU]# [5] [0] [0]**
- [↕]:** “Manual (Static)” → **[SELECT]**
- [↕]:** Select the desired item. → **[SELECT]**

- Enter the desired setting. → **[OK]**
 - Press **[◀▶]** to move the cursor if necessary.
- Set the other items as necessary.
- [↕]: [SAVE] → [OFF]**

Confirming network status

- [MENU]# [5] [2] [6]**
- [↕]** and **[◀▶]**: Display the desired information. → **[OFF]**

Resetting the hub’s network settings

All network-related settings will be reset to the default settings. No other information will be deleted.

- [MENU]# [7] [3] [0]**
- [↕]:** “Yes” → **[SELECT]**.
- [OK]**
 - The hub restarts. Wait until the hub LED indicator lights in yellow and then set the Wi-Fi network access settings using Home Network app. For more information, refer to the User’s Guide (page 40).

Voice mail service

Voice mail is an automatic answering service offered by your service provider/telephone company. After you subscribe to this service, your service provider/telephone company’s voice mail system answers calls for you when you are unavailable to answer the phone or when your line is busy. Messages are recorded by your service provider/telephone company, not your telephone. Please contact your service provider/telephone company for details of this service.

Important:

- To use the voice mail service provided by your service provider/telephone company rather than the unit’s answering system,

Programming

turn off the answering system (page 31).
For details, see page 36.

Storing the voice mail (VM) access number

In order to listen to your voice mail messages, you must dial your service provider/telephone company's voice mail access number. Once you have stored your voice mail access number, you can dial it automatically (page 30).

- 1 **[MENU]** **#** **3** **3** **1**
- 2 Enter your access number (24 digits max.). → **[SAVE]** → **[OFF]**

Note:

- When storing your voice mail access number and your mailbox password, press **[▲]** (Pause) to add pauses (page 13) between the access number and the password as necessary. Contact your service provider/telephone company for the required pause time.

Example:

1-222-333-4444	PPPP	8888
VM access number	Pauses	Password

To erase the voice mail access number

- 1 **[MENU]** **#** **3** **3** **1**
- 2 Press and hold **[CLEAR]** until all digits are erased. → **[SAVE]** → **[OFF]**

Voice mail (VM) tone detection

Your service provider/telephone company sends special signals (sometimes called "voice mail tones" or "stutter tones") to the unit to let you know you have new voice mail messages. If you hear a series of dial tones followed by a continuous dial tone after you press **[📞]** on the handset, you have new voice mail messages. Soon after you hang up a call or after the phone stops ringing, your

unit checks the phone line to see if new voice mail messages have been recorded.

Turn this feature off when:

- You do not subscribe to voice mail service.
- Your service provider/telephone company does not send voice mail tones.
- Your phone is connected to a PBX.

If you are not sure which setting is required, contact your service provider/telephone company.

Turning VM tone detection on/off

The default setting is "On".

- 1 **[MENU]** **#** **3** **3** **2**
- 2 **[↕]**: Select the desired setting. → **[SAVE]** → **[OFF]**

Listening to voice mail messages

The unit lets you know that you have new voice mail messages in the following way:
– "New Voice Mail" is displayed if message indication service is available.

- 1 **[MENU]** **#** **3** **3** **0**
 - The speakerphone turns on.
- 2 Follow the pre-recorded instructions.
- 3 When finished, press **[OFF]**.

Note:

- You can also use the **[VM]** soft key, if displayed, to play new voice mail messages.
- If the handset still indicates there are new messages even after you have listened to all new messages, turn it off by pressing and holding **#** until the handset beeps.

Answering system

The answering system can answer and record calls for you when you are unavailable to answer the phone.

You can also set the unit to play a greeting message but not to record caller messages by selecting “**Greeting only**” as the recording time setting (page 36).

Important:

- Make sure the unit’s date and time setting is correct. The time setting of the system is configured with the date and time of the mobile device registered to the hub. For more information, refer to the System Setup Guide of the hub.

Memory capacity (including your greeting message)

The total recording capacity is about 38 minutes. A maximum of 64 messages can be recorded.

Note:

- When message memory becomes full:
 - “**Messages full**” is shown on the handset display.
 - If you use the pre-recorded greeting message, the unit automatically switches to another pre-recorded greeting message asking callers to call again later.
 - If you recorded your own greeting message, the same message is still announced to callers even though their messages are not recorded.

Activating the answering system

You must activate the answering system before you can use it. The answering system is disabled by default.

- 1 **[MENU]#343**
- 2 **[↕]**: Select the desired setting. → **[SAVE]**

3 [OFF]

Turning the answering system on/off

The answering system will not answer calls while it is turned off.

- 1 **To turn on:**
[MENU]#327

- If the answering system is not activated, the unit prompts you to activate the answering system (page 31).

- To turn off:**
[MENU]#328

2 [OFF]

Note:

- When the answering system is turned on,  is displayed.

Greeting message

When the unit answers a call, a greeting message is played to callers.

You can use either:

- your own greeting message
- a pre-recorded greeting message

Recording your greeting message

- 1 **[MENU]#302**
- 2 **[↕]**: “**Yes**” → **[SELECT]**
- 3 After a beep sounds, hold the handset about 20 cm (8 inches) away and speak clearly into the microphone (2 minutes max.).
- 4 Press **[STOP]** to stop recording. → **[OFF]**

Using a pre-recorded greeting message

The unit provides 2 pre-recorded greeting messages:

- If you reset to pre-recorded greeting or do not record your own greeting message, the

Answering System

unit plays a pre-recorded greeting asking callers to leave a message.

- If the message recording time (page 36) is set to "Greeting only", callers' messages are not recorded and the unit plays a different pre-recorded greeting message asking callers to call again.

Resetting to a pre-recorded greeting message

If you want to use a pre-recorded greeting message once you record your own greeting message, your own recorded greeting message is erased.

- 1 [MENU]#304
- 2 [YES] → [OFF]

Playing back the greeting message

- 1 [MENU]#303
- 2 To exit, press [OFF].

Listening to messages

When new messages have been recorded, "New message" is displayed.

- 1 To listen to new messages:
[MENU]#323
To listen to all messages:
[MENU]#324

- 2 When finished, press [OFF].

Note:

- To switch to the receiver, press [↶].
- You can also use the [PLAY] soft key, if displayed, to play new messages.

Operating the answering system

[MENU] → [↕]: "Answering device" → [SELECT]

Key	Operation
[▲] or [▼]	Adjust the receiver/speaker volume (during playback)

Key	Operation
1 or [◀]	Repeat message (during playback)*1
2 or [▶]	Skip message (during playback)
3	Enter the "Settings" menu
4	Play new messages
5	Play all messages
6	Play greeting message
7/6	Record greeting message
8	Turn answering system on
[PAUSE]	Pause message*2
9 or [STOP]	Stop recording Stop playback
0	Turn answering system off
*4	Erase currently playing message
*5	Erase all messages
*6	Reset to a pre-recorded greeting message

*1 If pressed within the first 5 seconds of a message, the previous message is played.

*2 To resume playback:
[↕]: "Playback" → [SELECT]

*3 You can also erase as follows:
[PAUSE] → [↕]: "Erase" → [SELECT] → [↕]: "Yes" → [SELECT]

Rewinding the message

Press and hold [◀] until the unit plays the desired part of the message.

- During rewinding, the handset makes a continuous beeping sound. Rewinding speed may vary depending on the recorded message.
- At the beginning of the message, the unit plays the message at normal speed.

Fast-forwarding the message

Press and hold [▶] until the unit plays the desired part of the message.

- During fast-forwarding, the handset makes a continuous beeping sound. Fast-forwarding speed may vary depending on the recorded message.
- Even if you press and hold [▶] when the end of this message is played, the next message is played at normal speed.

Calling back (Caller ID subscribers only)

- 1 Press [PAUSE] during playback.
 - 2 [↕]: "Call back" → [SELECT]
- Editing the number before calling back
- 1 Press [PAUSE] during playback.
 - 2 [↕]: "Edit & Call" → [SELECT]
 - 3 Press [EDIT] repeatedly until the phone number is shown in the desired format (page 14). → [↵]

Erasing all messages

- 1 [MENU]#325
- 2 [↕]: "Yes" → [SELECT] → [OFF]

Advanced new message alerting features

Audible message alert

This feature allows the hub to beep to inform you of a new message arrival when new messages are recorded. The hub beeps 2 times every minute until you listen to the messages, if the "Hub beep" setting is turned on. The default setting is "off".

- 1 [MENU]#339
- 2 [↕]: Select the desired setting. → [SAVE] → [OFF]

New message alert by a call

This feature allows you to receive a notification by phone when new messages are recorded. The hub calls a phone number you

specify. You can then operate the answering system remotely to listen to the new message.

To use this feature, you must:

- store a phone number to which the unit makes the call to.
 - turn on the new message alert setting.
- After you answer the new message alert call, you can listen to messages from that call (page 34).

Important:

- A new message alert is stopped 1 minute after the unit starts to call. The unit will not retry the call even if the call is not answered.

Storing a phone number to which the unit makes an alert call

■ From the phonebook:

- 1 [MENU]#338
- 2 [↕]: "Notification to" → [SELECT] → [ADD]
- 3 [↕]: "Phonebook" → [SELECT]
- 4 [↕]: Select the desired phonebook entry. → [SAVE] → [OFF]

■ By entering a phone number:

- 1 [MENU]#338
- 2 [↕]: "Notification to" → [SELECT] → [ADD]
- 3 [↕]: "Manual" → [SELECT]
- 4 Enter the desired name (16 characters max.). → [OK]
- 5 Enter the desired number (24 digits max.). → [OK] → [SELECT] → [OFF]

Turning on/off the new message alert setting

- 1 [MENU]#338
- 2 [↕]: "On/Off" → [SELECT]
- 3 [↕]: Select the desired setting. → [SAVE] → [OFF]

Editing the set phone number

- 1 [MENU]#338

Answering System

- 2 [↕]: "Notification to" → [SELECT]
- 3 [MENU] → [↕]: "Edit" → [SELECT]
- 4 Edit the name if necessary (16 characters max.). → [OK]
- 5 Edit the phone number if necessary (24 digits max.). → [OK] → [SELECT] → [OFF]

Erasing the set phone number

- 1 [MENU]#338
- 2 [↕]: "Notification to" → [SELECT]
- 3 [MENU] → [↕]: "Erase" → [SELECT]
- 4 [↕]: "Yes" → [SELECT] → [OFF]
 - The new message alert setting is turned off.

Activating/inactivating the remote access code to play messages

If you activate this feature, you must enter the remote access code (page 34) to play the new message from the new message alert call. This is so that unauthorized parties cannot listen to your messages. The default setting is "Inactivate".

- "Inactivate": You can listen to the message by pressing [4] to play new messages (without entering the remote access code).
- "Activate": You must enter your remote access code and then press [4] to play new message.

- 1 [MENU]#338
- 2 [↕]: "Remote code" → [SELECT]
- 3 [↕]: Select the desired setting. → [SAVE] → [OFF]

Listening to messages

After you answer the new message alert, you can listen to the messages as follows.

- **When the remote access code is set to "Inactivate":**
Press [4] to play the new message during the announcement.

- **When the remote access code is set to "Activate":**

- 1 Enter the remote access code (page 34) during the announcement.
- 2 Press [4] to play the new message.

Note:

- Within 10 seconds after listening to new messages, you can press [#9] during the call to turn off the new message alert by a call feature.
- Even if the unit makes a new message alert call, the handset redial list does not show the record.

Remote operation

Using a touch-tone phone, you can call your phone number from outside and access the unit to listen to messages or change answering system settings. The unit's voice guidance prompts you to press certain dial keys to perform different operations.

Remote access code

A 3-digit remote access code must be entered when operating the answering system remotely. This code prevents unauthorized parties from listening to your messages remotely. The default setting is "111".

Important:

- To prevent unauthorized access to this product, we recommend that you regularly change the remote code.

- 1 [MENU]#306
- 2 Enter the desired 3-digit remote access code.
- 3 [SAVE] → [OFF]

Deactivating remote operation

Press [X] in step 2 on "Remote access code", page 34.

- The entered remote access code is deleted.

Using the answering system remotely

- 1 Dial your phone number from a touch-tone phone.
- 2 After the greeting message starts, enter your remote access code.
- 3 Follow the voice guidance prompts as necessary or control the unit using remote commands (page 35).
- 4 When finished, hang up.

Voice guidance

■ When the English voice guidance is selected

During remote operation, the unit's voice guidance starts and prompts you to press **[1]** to perform a specific operation, or press **[2]** to listen to more available operations.

■ When the Spanish voice guidance is selected

To start the voice guidance, press **[9]**. The voice guidance announces the available remote commands (page 35).

Note:

- If you do not press any dial keys within 10 seconds after a voice guidance prompt, the unit disconnects your call.

Remote commands

You can press dial keys to access certain answering system functions without waiting for the voice guidance to prompt you.

Key	Operation
[1]	Repeat message (during playback)*1
[2]	Skip message (during playback)
[4]	Play new messages
[5]	Play all messages
[9]	Stop playback*2 Start voice guidance*3
[0]	Turn answering system off
[*][4]	Erase currently playing message

Key	Operation
[*][5]	Erase all messages
[*][#]	End remote operation (or hang up)

- *1 If pressed within the first 5 seconds of a message, the previous message is played.
- *2 For English voice guidance only
- *3 For Spanish voice guidance only

Turning on the answering system remotely

Important:

- The answering system must be activated (page 31) in order to turn it on remotely.

- 1 Dial your phone number from a touch-tone phone.
- 2 Let the phone ring 15 times.
 - A long beep is heard.
- 3 Enter your remote access code within 10 seconds after the long beep.
 - The greeting message is played back.
 - You can either hang up, or enter your remote access code again and begin remote operation (page 34).

Answering system settings

Call screening

While a caller is leaving a message, you can listen to the call through the handset's speaker. To adjust the speaker volume, press **[▲]** or **[▼]** repeatedly.

You can answer the call by pressing **[📞]** on the handset.

Call screening can be set for each handset. The default setting is "on".

- 1 **[MENU][#][3][1][0]**
- 2 **[↕]**: Select the desired setting. → **[SAVE] → [OFF]**

Answering System

Number of rings before the unit answers a call

You can change the number of times the phone rings “**Ring count**” before the unit answers calls. You can select 2 to 7 rings, or “**Toll saver**”.

The default setting is “**4 rings**”.

“**Toll saver**”: The unit’s answering system answers at the end of the 2nd ring when new messages have been recorded, or at the end of the 5th ring when there are no new messages. If you call your phone from outside to listen to new messages (page 35), you know that there are no new messages when the phone rings for the 3rd time. You can then hang up without being charged for the call.

- 1 **[MENU]** **#** **2** **1** **1**
- 2 **[↕]**: Select the desired setting. → **[SAVE]** → **[OFF]**

For voice mail service subscribers

If you subscribe to a flat-rate service package that includes Caller ID, call waiting, voice mail, and unlimited local/regional/long distance calls, please note the following:

- To use the voice mail service provided by your service provider/telephone company rather than the unit’s answering system, turn off the answering system (page 31).
- To use this unit’s answering system rather than the voice mail service provided by your service provider/telephone company, please contact your service provider/telephone company to deactivate your voice mail service.

If your service provider/telephone company cannot do this:

- Set this unit’s “**Ring count**” setting so that this unit’s answering system answers calls before the voice mail service of your service provider/telephone company does. It is necessary to check the number of rings required to activate the voice mail service provided by your service provider/telephone company before changing this setting.
- Change the number of rings of the voice mail service so that the answering

system can answer the call first. To do so, contact your service provider/telephone company.

Caller’s recording time

You can change the maximum message recording time allowed for each caller. The default setting is “**3 min**”.

- 1 **[MENU]** **#** **3** **0** **5**
- 2 **[↕]**: Select the desired setting. → **[SAVE]** → **[OFF]**

Selecting “Greeting only”

You can select “**Greeting only**” which sets the unit to announce a greeting message to callers but not record messages.

Select “**Greeting only**” in step 2 on “**Caller’s recording time**”, page 36.

Note:

- When you select “**Greeting only**”:
 - If you do not record your own message, the unit will play the pre-recorded greeting-only message asking callers to call again later.
 - If you use your own message, record the greeting-only message asking callers to call again later (page 31).

Home Network System integration

If you have other devices registered to the hub, such as cameras, sensors, and smart plugs, you can use the handset as an integrated part of the Home Network System. Specifically, you can use the handset to:

- arm and disarm the system's security features (page 37).
- receive notifications when the sensors are triggered.
- display the status of each sensor (page 38).
- turn smart plugs on and off (page 39).

Security features

You can use the handset to arm and disarm the system's security features. If the system's sensors are triggered when the system is armed, such as when motion is detected or when a door or window is opened:

- the handset and hub sound an alert.
- the handset displays information about the detection.
- the handset announces the detection. (Talking notification feature; page 38)
- the hub LED indicator blinks in red.
- the **[ARM]** button on the handset blinks.

Additional features and settings are available when using the Home Network app (page 39).

Arming and disarming the system

The security system has 3 modes.

- **"At Home"**: Door and window sensors are armed.*1
- **"Away"**: All sensor devices are armed.*1
- **"Disarm"**: All sensor devices are disarmed.
- The hub LED indicator lights in red when the security mode is set to **"At Home"** or **"Away"**.

*1 Default settings. These settings can be changed when using the Home Network app. For more information, refer to the User's Guide (page 40).

■ To arm the system:

- 1 **[ARM]**
- 2 **[↕]**: Select **"At Home"** or **"Away"**. → **[SELECT]**
 - If the system is indicating that it has been triggered (such as when the alert is sounding), the mode cannot be changed to **"At Home"** and **"Away"**.
- 3 Enter the password if prompted. → **[OK]**
 - If you have not change the PIN from the default PIN, the handset will prompt you to change it (page 38).
 - When you select **"Away"**, you need to press **[OK]** to activate the mode. The hub sounds an alert for 3 minutes; this gives you time to leave home before the sensors can be triggered (Exit delay time). The sensors will be armed when the alert stops.

Note:

- If the system detects that a window or door is still open when you arm the security system, the handset will notify you. Close the window or door and then press **[OK]**.

■ To disarm the system:

- 1 **[DISARM]**
- 2 **[↕]**: **"Disarm"** → **[SELECT]**
- 3 Enter the password. → **[OK]**

Note:

- By default, after door sensors and motion sensors make a detection, the system gives you 3 minutes to disarm the system (Entry delay time). During this time, the entry delay alert will sound. If you do not disarm the system in time, the sensors are triggered and the security alert sounds.

Stopping the alert

When a sensor is triggered, the hub and handset sound an alert. Use the following procedure to stop the alert.

- 1 Press **[STOP]** or **[OFF]**.

Home Network System Integration

- 2 Enter the password. → [OK]

Note:

- By pressing [DISARM], you can disarm the security system and stop the alert. See “Arming and disarming the system”, page 37.

Displaying sensor status

The status of each sensor device is shown on the handset.

- 1 [MENU]#8001
- 2 [↕]: Select “All locations” or the area in which the desired sensor devices belong to. → [SELECT]
- 3 [↕]: Select the desired sensor.
 - Press [REFRESH] to refresh the displayed information.

Talking notification feature

This feature allows you to get information about a triggered sensor without looking at the display. When a sensor is triggered, the handset can announce the location of the sensor detected, the sensor name, and the type of detection. The announcement is heard before the alert sounds. The default setting is “On”.

- 1 [MENU]#8009
- 2 [↕]: Select the desired setting. → [SAVE]
- 3 [OFF]

Alert volume

You can adjust the alert volume heard during At Home mode and Away mode.

- “Alert volume”: The volume of the alert that sounds when the system is not disarmed within the entry delay time (page 37).
- “Entry alert volume”: The volume of the alert that sounds during the entry delay time (page 37).
- “Exit alert volume”: The volume of alert that sounds during exit delay time (page 37).

Changing alert volume

- 1 For handset:
[MENU]#8003 (At Home) or
[MENU]#8004 (Away)
For hub:
[MENU]#*8003 (At Home) or
[MENU]#*8004 (Away)
- 2 [↕]: Select the desired setting. → [SAVE]

- 3 [OFF]

Changing entry alert volume

- 1 For handset:
[MENU]#8008 (At Home) or
[MENU]#8007 (Away)
For hub:
[MENU]#*8008 (At Home) or
[MENU]#*8007 (Away)
- 2 [↕]: Select the desired setting. → [SAVE]

- 3 [OFF]

Changing exit alert volume

- 1 For hub:
[MENU]#8005 (Away)
- 2 [↕]: Select the desired setting. → [SAVE]
- 3 [OFF]

Setting/changing the disarm PIN

You must enter the disarm PIN in order to disarm the security system. The default PIN is “0000”. We recommend changing the disarm PIN.

Important:

- When you change the disarm PIN, please make note of the new PIN. The unit will not reveal the PIN to you. If you forget the PIN, contact an authorized service center.

- 1 [MENU]#8100
- 2 Enter the current disarm PIN (4-8 digits). → [OK]
 - Skip this step when setting the disarm PIN for the first time.
- 3 Enter the new disarm PIN (4-8 digits). → [OK]
- 4 Re-enter the new disarm PIN. → [SAVE]

5 [OFF]

Smart plug features

Smart plugs (KX-HNA101) allow you to use the handset to turn electric devices on and off. Smart plugs also feature an overcurrent sensor that automatically shuts off the electric device if an overcurrent is detected.

Turning smart plug on and off

There are 3 ways to turn smart plugs on and off.

- All smart plugs can be turned on or off at once.
- All smart plugs in a selected area can be turned on or off at once.
- Individual smart plugs can be turned on or off.

Turning multiple plugs on or off

- 1 [MENU]#802
- 2 To turn all smart plugs on or off:
[↕]: "All locations" → [SELECT]
To turn all smart plugs in a selected area on or off:
[↕]: Select the desired area. → [SELECT]
- 3 [↕]: Select "All Smart Plugs On" or "All Smart Plugs Off". → [SELECT]

Note:

- The status of smart plugs may fail to change. In this case, an error message indicating the number of the smart plugs that have not changed is displayed. To confirm the status, see "Displaying smart plug status", page 39.

Turning an individual smart plug on or off

- 1 [MENU]#802
- 2 [↕]: Select the desired area. → [SELECT]
- 3 [↕]: "Smart Plug status" → [SELECT]
- 4 [↕]: Select the desired smart plug.

- 5 Press [ON] or [OFF] (Softkey).

Displaying smart plug status

- 1 [MENU]#802
- 2 [↕]: Select the desired area. → [SELECT]
- 3 [↕]: "Smart Plug status" → [SELECT]
- 4 [↕]: Select the desired smart plug.

Home Network app features

Some of the features that are available when using the Home Network app are listed below. For more information, refer to the User's Guide (page 40).

- **Phone features**
Make and receive calls, listen to answering system messages, check call logs, etc.
- **Camera monitoring**
Watch live images from your cameras, even when away from home.
- **Security features**
Receive notifications when the security system is triggered.
- **Home control**
Configure the system to record camera images, turn on smart plugs, or call a preprogrammed phone number when a sensor is triggered.

Downloading the Home Network app

Download information is available at the web page listed below.



www.panasonic.net/pcc/support/tel/homenetwork/

Home Network System Integration

Accessing the User's Guide

The User's Guide is a collection of online documentation that helps you get the most out of the Home Network app.

1 iPhone®/iPad®

Tap  in the app's home screen.

Android™ devices

Tap  or press your mobile device's menu button in the app's home screen.

2 Tap [User's Guide].

Note:

- You can also access the User's Guide at the web page listed below.



www.panasonic.net/pcc/support/tel/homenetwork/manual/

Character table

The dial keys are used to enter characters and numbers. Each dial key has multiple characters assigned to it.

0	1 ^{*1}	2	3	4	5	6	7	8	9	#
␣	& ' () * , - . / 1	A B C 2	D E F 3	G H I 4	J K L 5	M N O 6	P Q R S 7	T U V 8	W X Y Z 9	#
		a b c 2	d e f 3	g h i 4	j k l 5	m n o 6	p q r s 7	t u v 8	w x y z 9	

*1 The following characters are assigned to the **1** key when entering a Wi-Fi password.

! " # \$ % & ' () * + , - . / 1 : ; < = > ? @ [\] ^ _ { | } ~

Note:

- While entering characters, you can switch between uppercase and lowercase by pressing **↔** (A→a).
- To enter another character that is located on the same dial key, first press **▶** to move the cursor to the next space.
- If you do not press any dial key within 2 seconds after entering a character, the character is fixed and the cursor moves to the next space.
- ␣ in the above table represents a single space.

Erasing the character or number

To erase a character or number, press **◀** or **▶** and then press **[CLEAR]**.

To erase all characters and numbers, press and hold **[CLEAR]**.

Error messages

Display message	Cause/solution
Hub no power or No link. Re- connect Hub AC adaptor.	<ul style="list-style-type: none"> • The handset has lost communication with the hub. Move closer to the hub and try again. • Unplug the hub's AC adaptor to reset the unit. Reconnect the adaptor and try again. • The handset's registration may have been canceled. Re-register the handset (page 12).
Busy	<ul style="list-style-type: none"> • The called unit is in use. • Other units are in use and the system is busy. Try again later. • The handset you are using is too far from the hub. Move closer and try again.
Call phone company for your access #	<ul style="list-style-type: none"> • You have not stored the voice mail access number. Store the number (page 30).

Useful Information

Display message	Cause/solution
Cannot obtain IP address	<ul style="list-style-type: none">Your wireless router does not support DHCP, or the DHCP feature of your wireless router is turned off. If your wireless router supports DHCP, make sure that its DHCP feature is turned on. If DHCP is not available, set the hub's IP settings manually. See "Advanced configuration (static IP settings)", page 29.
Error!!	<ul style="list-style-type: none">Recording was too short. Try again.
Failed to connect	<ul style="list-style-type: none">You entered the wrong password when configuring the hub to connect to your wireless router. Confirm the password and try again. If your wireless router is configured to use a hexadecimal password, enter the correct password using numbers 0-9 and letters a-f.If you have configured your wireless router to use MAC address filtering, make sure you add the hub's MAC address to the list of authorized MAC addresses.
Invalid	<ul style="list-style-type: none">There is no handset registered to the hub matching the handset number you entered.The handset is not registered to the hub. Register the handset (page 12).
IP address conflicts	<ul style="list-style-type: none">The IP address assigned to the hub is also assigned to another device on your network. Check the IP address settings of the hub and other devices on the network.
Requires subscription to Caller ID.	<ul style="list-style-type: none">You must subscribe to a Caller ID service. Once you receive caller information after subscribing to a Caller ID service, this message will not be displayed.
Use rechargeable battery.	<ul style="list-style-type: none">A wrong type of battery such as Alkaline or Manganese was inserted. Use only the rechargeable Ni-MH batteries noted on page 3, 7.
Wrong PW (PW: Password)	<ul style="list-style-type: none">You entered the wrong password when configuring the hub to connect to your wireless router. Confirm the password and try again.

Troubleshooting

If you still have difficulties after following the instructions in this section, disconnect the hub's AC adaptor, then reconnect the hub's AC adaptor. Remove the batteries from the handset, and then insert the batteries into the handset again.

General use

Problem	Cause/solution
The handset does not turn on even after installing charged batteries.	<ul style="list-style-type: none">Place the handset on the charger to turn on the handset.

Useful Information

Problem	Cause/solution
The unit does not work.	<ul style="list-style-type: none"> • Make sure the batteries are installed correctly (page 9). • Fully charge the batteries (page 9). • Check the connections (page 9). • Unplug the hub's AC adaptor to reset the unit. Reconnect the adaptor and try again. • The handset has not been registered to the hub. Register the handset (page 12).
I cannot hear a dial tone.	<ul style="list-style-type: none"> • The hub's AC adaptor or telephone line cord is not connected. Check the connections. • Disconnect the hub from the telephone line and connect the line to a known working telephone. If the working telephone operates properly, contact our service personnel to have the unit repaired. If the working telephone does not operate properly, contact your service provider/telephone company.
The hub beeps.	<ul style="list-style-type: none"> • New messages have been recorded. Listen to the new messages (page 32).
I cannot set date and time.	<ul style="list-style-type: none"> • You cannot set date and time with the handset. The time setting of the system is configured with the date and time of the mobile device registered to the hub. For more information, refer to the System Setup Guide of the hub.
I cannot use alarm and silent mode.	<ul style="list-style-type: none"> • The date and time is not set. The time setting of the system is configured with the date and time of the mobile device registered to the hub. For more information, refer to the System Setup Guide of the hub.

Menu list

Problem	Cause/solution
The display is in a language I cannot read.	<ul style="list-style-type: none"> • Change the display language (page 12).
I cannot register a handset to a hub.	<ul style="list-style-type: none"> • The maximum number of handsets (6) is already registered to the hub. Cancel unused handset registrations from the hub (page 12).

Battery recharge

Problem	Cause/solution
The handset beeps and/or  blinks.	<ul style="list-style-type: none"> • Battery charge is low. Fully charge the batteries (page 9).
I fully charged the batteries, but <ul style="list-style-type: none"> –  still blinks, –  is displayed, or – the operating time seems to be shorter. 	<ul style="list-style-type: none"> • Clean the battery ends (\oplus, \ominus) and the charge contacts with a dry cloth and charge again. • It is time to replace the batteries (page 9).

Useful Information

Making/answering calls, intercom

Problem	Cause/solution
📞 is displayed.	<ul style="list-style-type: none">• The handset is too far from the hub. Move closer.• The hub's AC adaptor is not properly connected. Reconnect AC adaptor to the hub.• The handset is not registered to the hub. Register it (page 12).
Noise is heard, sound cuts in and out.	<ul style="list-style-type: none">• You are using the handset or hub in an area with high electrical interference. Re-position the hub and use the handset away from sources of interference.• Move closer to the hub.• If you use a DSL/ADSL service, we recommend connecting a DSL/ADSL filter between the hub and the telephone line jack. Contact your DSL/ADSL provider for details.
The handset does not ring.	<ul style="list-style-type: none">• The ringer volume is turned off. Adjust the ringer volume (page 13, 24).• Silent mode is turned on. Turn it off (page 26).
I cannot make a call.	<ul style="list-style-type: none">• The dialing mode may be set incorrectly. Change the setting (page 12).
I cannot make long distance calls.	<ul style="list-style-type: none">• Make sure that you have long distance service.

Caller ID/Talking Caller ID

Problem	Cause/solution
Caller information is not displayed.	<ul style="list-style-type: none">• You must subscribe to Caller ID service. Contact your service provider/telephone company for details.• If your unit is connected to any additional telephone equipment such as a Caller ID box or cordless telephone line jack, plug the unit directly into the wall jack.• If you use a DSL/ADSL service, we recommend connecting a DSL/ADSL filter between the hub and the telephone line jack. Contact your DSL/ADSL provider for details.• The name display service may not be available in some areas. Contact your service provider/telephone company for details.• Other telephone equipment may be interfering with this unit. Disconnect the other equipment and try again.
Caller information is displayed or announced late.	<ul style="list-style-type: none">• Depending on your service provider/telephone company, the unit may display or announce the caller's information at the 2nd ring or later.• Move closer to the hub.

Useful Information

Problem	Cause/solution
Caller information is not announced.	<ul style="list-style-type: none"> • The handset ringer volume is turned off. Adjust it (page 13, 24). • The Talking Caller ID feature is turned off. Turn it on (page 24). • The number of rings for the answering system is set to “2 rings” or “Toll saver”. Select a different setting (page 36). • If the hub and another handset are having an intercom call, your handset does not announce caller information.
The caller list/incoming phone numbers are not edited automatically.	<ul style="list-style-type: none"> • The Caller ID number auto edit feature is turned off. Turn it on and try again (page 24). • You need to call back the edited number to activate Caller ID number auto edit.
I cannot dial the phone number edited in the caller list.	<ul style="list-style-type: none"> • The phone number you dialed might have been edited incorrectly (for example, the long distance “1” or the area code is missing). Edit the phone number with another pattern (page 14).
The 2nd caller’s information is not displayed during an outside call.	<ul style="list-style-type: none"> • In order to use Caller ID, call waiting, or Call Waiting Caller ID (CWID), you must first contact your service provider/telephone company and subscribe to the desired service. After subscribing, you may need to contact your service provider/telephone company again to activate this specific service, even if you already subscribed to both Caller ID and Call Waiting with Caller ID services (CWID).

Answering system

Problem	Cause/solution
The unit does not record new messages.	<ul style="list-style-type: none"> • The answering system is turned off. Turn it on (page 31). • The message memory is full. Erase unnecessary messages (page 32). • The recording time is set to “Greeting only”. Change the setting (page 36). • Your service provider/telephone company’s voice mail service may be answering your calls before the unit’s answering system can answer your calls. Change the unit’s number of rings setting (page 36) to a lower value, or contact your service provider/telephone company.

Useful Information

Problem	Cause/solution
I cannot operate the answering system remotely.	<ul style="list-style-type: none">• The remote access code is not set. Set the remote access code (page 34).• You are entering the wrong remote access code. If you have forgotten your remote access code, enter the remote access code setting to check your current code (page 34).• The answering system is turned off. Turn it on (page 35). The answering system must be activated (page 31) in order to turn it on remotely.
The unit does not emit the specified number of rings.	<ul style="list-style-type: none">• If the first ring is turned off, the number of rings decreases by 1 from the specified number of rings.

Voice mail

Problem	Cause/solution
“New Voice Mail” is shown on the handset display. How do I remove this message from the display?	<ul style="list-style-type: none">• This notification is displayed when your service provider/telephone company’s voice mail service (not the unit’s answering system) has recorded a message for you. Typically you can remove this notification from the display by listening to the message. To listen to the message, dial the voice mail number provided by your service provider/telephone company (for most cases, this will be your own phone number), and follow the voice instructions. Depending on your service provider/telephone company, you may need to remove all messages from your voice mailbox to remove the notification. You can also remove this notification by pressing and holding # until the unit beeps.

Liquid damage

Problem	Cause/solution
Liquid or other form of moisture has entered the handset/hub.	<ul style="list-style-type: none">• Disconnect the AC adaptor and telephone line cord from the hub. Remove the batteries from the handset and leave to dry for at least 3 days. After the handset/hub are completely dry, reconnect the AC adaptor and telephone line cord. Insert the batteries and charge fully before use. If the unit does not work properly, contact an authorized service center.

Caution:

- To avoid permanent damage, do not use a microwave oven to speed up the drying process.

Useful Information

Network connection


Problem	Cause/solution
I am having trouble connecting.	<ul style="list-style-type: none">● Your wireless router is not turned or is not functioning. Refer to the operating instructions included with your wireless router.● Your mobile device is not connected to your wireless router. Check your mobile device's Wi-Fi settings. Refer to the operating instructions included with your mobile device.● The SSID (wireless network name), security type, or password assigned to the wireless router has been changed. Configure the hub again using the procedure described in "Wi-Fi network access settings", page 29.● Confirm the hub's Wi-Fi and IP settings using the procedure described in "Confirming network status", page 29.● If your wireless router's client isolation feature (a feature that prevents wireless devices connected to the same wireless router from communicating with each other) is turned on, your hub and your mobile device will not be able to communicate with each other. Refer to the operating instructions included with your wireless router and make sure that this feature is turned off.● The hub's network settings are incorrect. Reset the hub's network settings (page 29) and configure the network settings again.

Guía Rápida Española

Conexiones


Cargador

- ① Conecte el adaptador de corriente alterna a la toma de corriente.

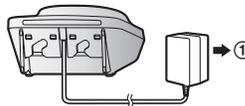

Instalación y carga de la batería

Cargue aproximadamente durante 7 horas.

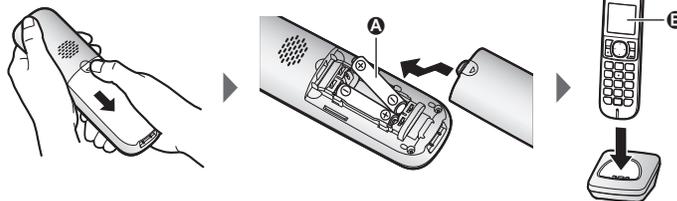


Nota:

- UTILICE SOLO baterías recargables de NI-MH tamaño AAA (R03) (A).
- NO utilice baterías Alcalinas, de Manganeseo o de Ni-Cd.
- Confirme que las polaridades estén correctas (+, -).
- Cambie el idioma de la pantalla.
- Confirme que aparezca "Cargando" (B).

Sugerencias de operación


Teclas de función

Al oprimir una tecla de función, puede seleccionar la función que aparece directamente encima de ella en la pantalla. Preste atención a la pantalla para ver qué funciones están asignadas a las teclas de función durante la operación.

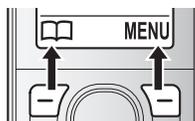

Tecla navegadora

- [▲], [▼], [◀], o [▶]: Navegue por diversas listas y elementos.
- ▲ (Volumen: [▲] o [▼]): Ajuste el volumen del receptor o el altavoz mientras habla.
- [◀] □: Vea la entrada del directorio telefónico.
- [▶] REDIAL (Remarcación): Vea la lista de remarcación.
- [▼] CID (identificador de llamadas): Vea la lista de personas que llamaron.

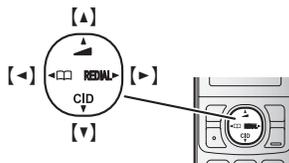

Cambio de idiomas (Auricular) (predeterminado: "English")

Idioma de la pantalla
 [MENU] [F1] [F1] [0] → [↕]: "Español" → [GUARDA] → [OFF]

Idioma de la guía de voz
 [MENU] [F1] [F1] [2] → [↕]: "Español" → [GUARDA] → [OFF]

Operaciones básicas

Cómo hacer y contestar llamadas (Auricular)

Para hacer llamadas	Marque el número telefónico. → [📞]/[☎]
Para contestar llamadas	[📞]/[☎]
Para colgar	[OFF]
Para ajustar el volumen del receptor o del altavoz	Oprima [▲] o [▼] repetidamente mientras habla.
Cómo hacer una llamada usando la lista de remarcación	[▶] REDIAL → [↕]: Seleccione el número telefónico deseado. → [📞]
Para ajustar el volumen del timbre del auricular	Oprima [▲] o [▼] repetidamente para seleccionar el volumen deseado mientras timbra.

Directorio telefónico (Auricular)

Para añadir entradas	<ol style="list-style-type: none"> 1 [□] o [◀] □ → [MENU] 2 [↕]: "Agregar Ent. Nueva" → [SELEC.] 3 Introduzca el nombre de la persona (máx. 16 caracteres). → [OK] 4 Introduzca el número telefónico de la persona (máx. 24 dígitos). → [OK] 5 [↕]: Seleccione el grupo deseado. → [SELEC.] 2 veces → [OFF]
Para hacer llamadas	[□] o [◀] □ → [↕]: Seleccione la entrada deseada. → [📞]

Sistema contestador de llamadas (Auricular)

Para escuchar mensajes	<p>Para escuchar mensajes nuevos: [REPRO.] o [MENU] [F3] [2] [3]</p> <p>Para escuchar todos los mensajes: [MENU] [F3] [2] [4]</p>
------------------------	---

Guía Rápida Española

Integración del Sistema de red doméstico

Funciones de seguridad (Auricular)

Activación del sistema

- 1 **[ARM]**
- 2 **[↕]**: Seleccione "En casa" o "Fuera". → **[SELEC.]**
- 3 Introduzca la clave si es necesario. → **[OK]**
 - Cuando selecciona el modo "Fuera", necesita oprimir **[OK]** para activarlo.

Desactivación del sistema

- 1 **[DISARM]**
- 2 **[↕]**: "Desarmar" → **[SELEC.]**
- 3 Introduzca la clave. → **[OK]**

Cómo detener la alerta

- 1 Oprima **[PARAR]** o **[OFF]**.
- 2 Introduzca la clave. → **[OK]**

Funciones del enchufe inteligente (Auticular)

Encendido y apagado del enchufe inteligente

- 1 **[MENU]** **[#]** **[8]** **[0]** **[2]**
- 2 **[↕]**: Seleccione el área deseada. → **[SELEC.]**
- 3 **[↕]**: "Estado del enchufe int." → **[SELEC.]**
- 4 **[↕]**: Seleccione el enchufe inteligente.
- 5 Oprima **[ENC.]** u **[APAGADO]** (Tecla de función).

Preguntas frecuentes

Pregunta	Causa y solución
¿Por qué aparece  ?	<ul style="list-style-type: none"> • La unidad portátil está demasiado lejos del concentrador. Acérquelo. • El adaptador para corriente del concentrador no está conectado correctamente. Conecte de nuevo el adaptador para corriente al concentrador. • La unidad portátil no está registrada en el concentrador. Regístrelo. <ol style="list-style-type: none"> 1 Auricular: [MENU] [F] [1] [3] [0] 2 Concentrador: Mantenga oprimido [] A HANDSET/LOCATOR hasta que el indicador LED parpadee en color verde. 3 Auricular: Oprima [OK], y después espere hasta que suene un pitido largo.
¿Cómo se incrementa el nivel de volumen del auricular?	<ul style="list-style-type: none"> • Oprima la tecla de navegación [] repetidamente mientras habla.
¿Por qué hay ruido o se corta la conversación?	<ul style="list-style-type: none"> • Trate de reubicar el concentrador de forma que se minimice la distancia a la unidad portátil. • Si ocurre el mismo problema incluso con la unidad portátil junto al concentrador, visite: www.panasonic.com/support
¿Es posible añadir otra unidad portátil accesoria a mi concentrador?	<ul style="list-style-type: none"> • Sí, puede registrar un total de 6 unidades portátiles en el concentrador. • Para adquirir auriculares accesorios adicionales (KX-HNH100), visite: www.pstc.panasonic.com Los usuarios TTY (usuarios con impedimentos auditivos o del habla) pueden llamar al 1-866-605-1277.
¿Es posible mantener cargando las baterías todo el tiempo?	<ul style="list-style-type: none"> • Puede dejar la unidad portátil en el concentrador o el cargador el tiempo que lo desee.
¿Cómo se contestan las llamadas en espera (segunda llamada)?	<ul style="list-style-type: none"> • Oprima [CALL WAIT] cuando escuche el tono de llamada en espera.

Appendix

Specifications

- **Standard:**
DECT 6.0 (Digital Enhanced Cordless Telecommunications 6.0)
- **Frequency range:**
1.92 GHz to 1.93 GHz
- **RF transmission power**
115 mW (max.)
- **Power source:**
Handset:
AAA (R03) Ni-MH battery (2 × 1.2 V, 400 mAh)
Charger:
120 V AC, 60 Hz
- **Power consumption:**
Charger:
Standby: Approx. 0.1 W
Maximum: Approx. 1.8 W
- **Operating conditions:**
0 °C – 40 °C (32 °F – 104 °F), 20 % – 80 % relative air humidity (dry)
- **Dimensions:**
Handset: Approx. 164 mm × 48 mm × 29 mm (6 15/32 inches × 1 7/8 inches × 1 1/8 inches)
Charger: Approx. 39 mm × 72 mm × 72 mm (1 17/32 inches × 2 27/32 inches × 2 27/32 inches)
- **Mass (weight):**
Handset: Approx. 109 g (0.24 lb) excluding the batteries
Charger: Approx. 43 g (0.09 lb) excluding the AC adaptor

FCC and other information

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:ACJ-----.

If requested, this number must be provided to the telephone company.

- Registration No.....(found on the bottom of the hub)
- Ringer Equivalence No. (REN).....0.1B

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with the product. It is designed to be connected to a compatible modular jack that is also compliant.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for the product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3).

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be

advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, please contact a Factory Service Center or other Authorized Servicer. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This equipment is hearing aid compatible as defined by the FCC in 47 CFR Section 68.316.

When you hold the phone to your ear, noise might be heard in your Hearing Aid. Some Hearing Aids are not adequately shielded from external RF (radio frequency) energy. If noise occurs, use an optional headset accessory or the speakerphone option (if applicable) when using this phone. Consult with your audiologist or Hearing Aid

Appendix

manufacturer about the availability of Hearing Aids which provide adequate shielding to RF energy commonly emitted by digital devices.

WHEN PROGRAMMING EMERGENCY NUMBERS AND/OR MAKING TEST CALLS TO EMERGENCY NUMBERS:

- 1) Remain on the line and briefly explain to the dispatcher the reason for the call.
- 2) Perform such activities in the off-peak hours, such as early morning or late evenings.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this phone.

CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, move the cordless telephone further away from the TV or VCR. This will often reduce or eliminate interference.

FCC RF Exposure Warning:

- This product complies with FCC radiation exposure limits set forth for an uncontrolled environment.
- To comply with FCC RF exposure requirements, the hub must be installed and operated 20 cm (8 inches) or more between the product and all person's body.
- This product may not be collocated or operated in conjunction with any other antenna or transmitter.
- For body-worn operation, the handset must be used only with a non-metallic accessory. Use of other accessories may not ensure compliance with FCC RF exposure requirements.

Notice:

- FCC ID can be found inside the battery compartment of the unit.

Customer services

Customer Services Directory (United States and Puerto Rico)

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Service Center; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

www.panasonic.com/support

or, contact us via the web at:

www.panasonic.com/contactinfo

You may also contact us directly at: 1-800-211-PANA (1-800-211-7262),
Monday - Friday 9 am to 9 pm; Saturday - Sunday 10 am to 7 pm, EST.

For hearing or speech impaired TTY users, TTY: 1-877-833-8855

Accessory Purchases (United States and Puerto Rico)

Purchase Parts, Accessories and Owner's Manual online for all Panasonic Products by visiting our Web Site at:

www.pstc.panasonic.com

or, send your request by E-mail to:

npcparts@us.panasonic.com

You may also contact us directly at:

1-800-237-9080 (Fax Only)

(Monday - Friday 9 am to 9 pm, EST.)

Panasonic National Parts Center

20421 84th Avenue S., Kent, WA 98032

(We accept Visa, MasterCard, Discover Card, American Express.)

For hearing or speech impaired TTY users, TTY: 1-866-605-1277

Appendix

Warranty (For United States and Puerto Rico)

Panasonic Home Network System Products Limited Warranty

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Corporation of North America (referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("Limited Warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by the warrantor.

	Parts	Labor
Home Network System Products	One (1) Year	One (1) Year
microSD card (Included model only)	90 days	N/A

During the "Labor" Limited Warranty period there will be no charge for labor. During the "Parts" Limited Warranty period, there will be no charge for parts. You must mail-in your product prepaid during the Limited Warranty period. This Limited Warranty excludes both parts and labor for batteries, antennas, and cosmetic parts (cabinet). This Limited Warranty only applies to products purchased and serviced in the United States or Puerto Rico. This Limited Warranty is extended only to the original purchaser and only covers products purchased as new.

Mail-In Service--Online

Online Repair Request

To submit a new repair request and for quick repair status visit our Web Site at www.panasonic.com/repair

When shipping the unit carefully pack in a padded shipping carton, include all accessories, and send it prepaid. Include a letter detailing the complaint, a return address and provide a day time phone number where you can be reached. P.O. Boxes are not acceptable. Keep the tracking number for your records. A copy of valid registered receipt is required under the 1 year parts and labor Limited Warranty.

For Limited Warranty service for headsets if a headset is included with this product please follow instructions above.

IF REPAIR IS NEEDED DURING THE LIMITED WARRANTY PERIOD THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.

Limited Warranty Limits And Exclusions

This Limited Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The Limited Warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, bug infestation, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY. (As examples, this excludes damages for lost time, lost calls or messages, cost of having someone remove or re-install an installed unit if applicable, travel to and from the servicer. The items listed are not exclusive, but are for illustration only.) **ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This Limited Warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the Limited Warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.




When you ship the product

- Carefully pack your unit, preferably in the original carton.
- Attach a letter, detailing the symptom.
- Send the unit to Panasonic Exchange Center, prepaid and adequately insured.
- Do not send your unit to Panasonic Corporation of North America listed on the back cover or to executive or regional sales offices. These locations do not repair consumer products.



Index

Index

- # 3-way conference: 16
- A** Alarm: 26
 - Answering calls: 13
 - Answering system
 - Activating the answering system: 31
 - Call screening: 35
 - Erasing messages: 32, 35
 - Greeting message: 31
 - Greeting only: 36
 - Listening to messages: 32, 35
 - New message alerting: 33
 - Number of rings: 36
 - Recording time: 36
 - Remote access code: 34
 - Remote operation: 34
 - Ring count: 36
 - Toll saver: 36
 - Turning on/off: 31
 - Auto talk: 13, 24
- B** Battery: 9, 10
- Booster (Clarity booster): 16
- C** Call block: 27
 - First ring: 28
- Call share: 16, 25
- Call waiting: 15
- Call Waiting Caller ID: 15, 45
- Caller ID number auto edit: 14, 24
- Caller list: 14
- Caller list edit: 14
- Chain dial: 19
- CID (Caller ID): 14
- Conference calls: 16
- Control type: 11
- Customer support: 25
- D** Dialing mode: 12
 - Direct command code: 21
- Display
 - Contrast: 24
 - Language: 12
- E** Eco mode: 10
- Equalizer: 16
- Error messages: 41
- F** Flash: 15, 25
- G** Groups: 18
- H** Handset
 - Deregistration: 12
 - Locator: 17
 - Name: 28
 - Registration: 12
- Hold: 15
- Home Network System integration: 37
 - Alert volume: 38
 - Arm/Disarm: 37
 - Disarm PIN: 38
 - Home Network app: 39
 - Security features: 37
 - Smart plug on/off: 39
 - Status: 38, 39
 - Talking notification: 38
- I** Intercom: 17
- K** Key tone: 24
- L** Line mode: 25
- M** Making calls: 13
- Missed calls: 14
- Mute: 15
- N** Network status: 29
- Noise reduction: 16
- P** Pause: 13
- Phonebook: 18
- R** Redialing: 13
- Ringer ID: 18
- Ringer tone: 24
- Rotary/pulse service: 16
- S** Silent mode: 26
- Speed dial: 20
- SP-PHONE (Speakerphone): 13
- T** Talking Caller ID: 14
- Temporary tone dialing: 16
- Transferring calls: 16
- Troubleshooting: 42
- TTY: 55
- V** VM (Voice mail): 30
- Voice guidance language: 12
- Voice mail: 29, 36
- Volume
 - Receiver: 13
 - Ringer (Handset): 13, 24
 - Speaker: 13
- W** Wall mounting: 9
- Wi-Fi settings: 28

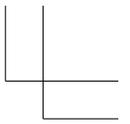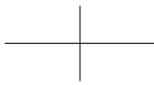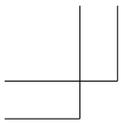

Notes

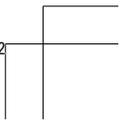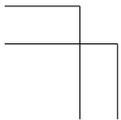

IMPORTANT!

If your product is not working properly. . .

- ① **Make sure that the hub is connected to the telephone line.**
- ② **Use rechargeable Ni-MH batteries.**
(Alkaline/Manganese/Ni-Cd batteries CANNOT be used.)
- ③ **Reinsert the batteries and restart the handset.**
- ④ Read **troubleshooting** page in the **Operating Instructions**.



Visit our Web site: www.panasonic.com/support

- **FAQ and troubleshooting hints are available.**

For your future reference

We recommend keeping a record of the following information to assist with any repair under warranty.

Serial No. (found in the handset battery compartment)	Date of purchase
Name and address of dealer	

Attach your purchase receipt here.

Panasonic Corporation of North America

Two Riverfront Plaza, Newark, NJ 07102-5490

© Panasonic System Networks Co., Ltd. 2014

Printed in China



PNQX6696ZA

PNQX6696ZA CC0814WK0 (E)